NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

NLI 110272

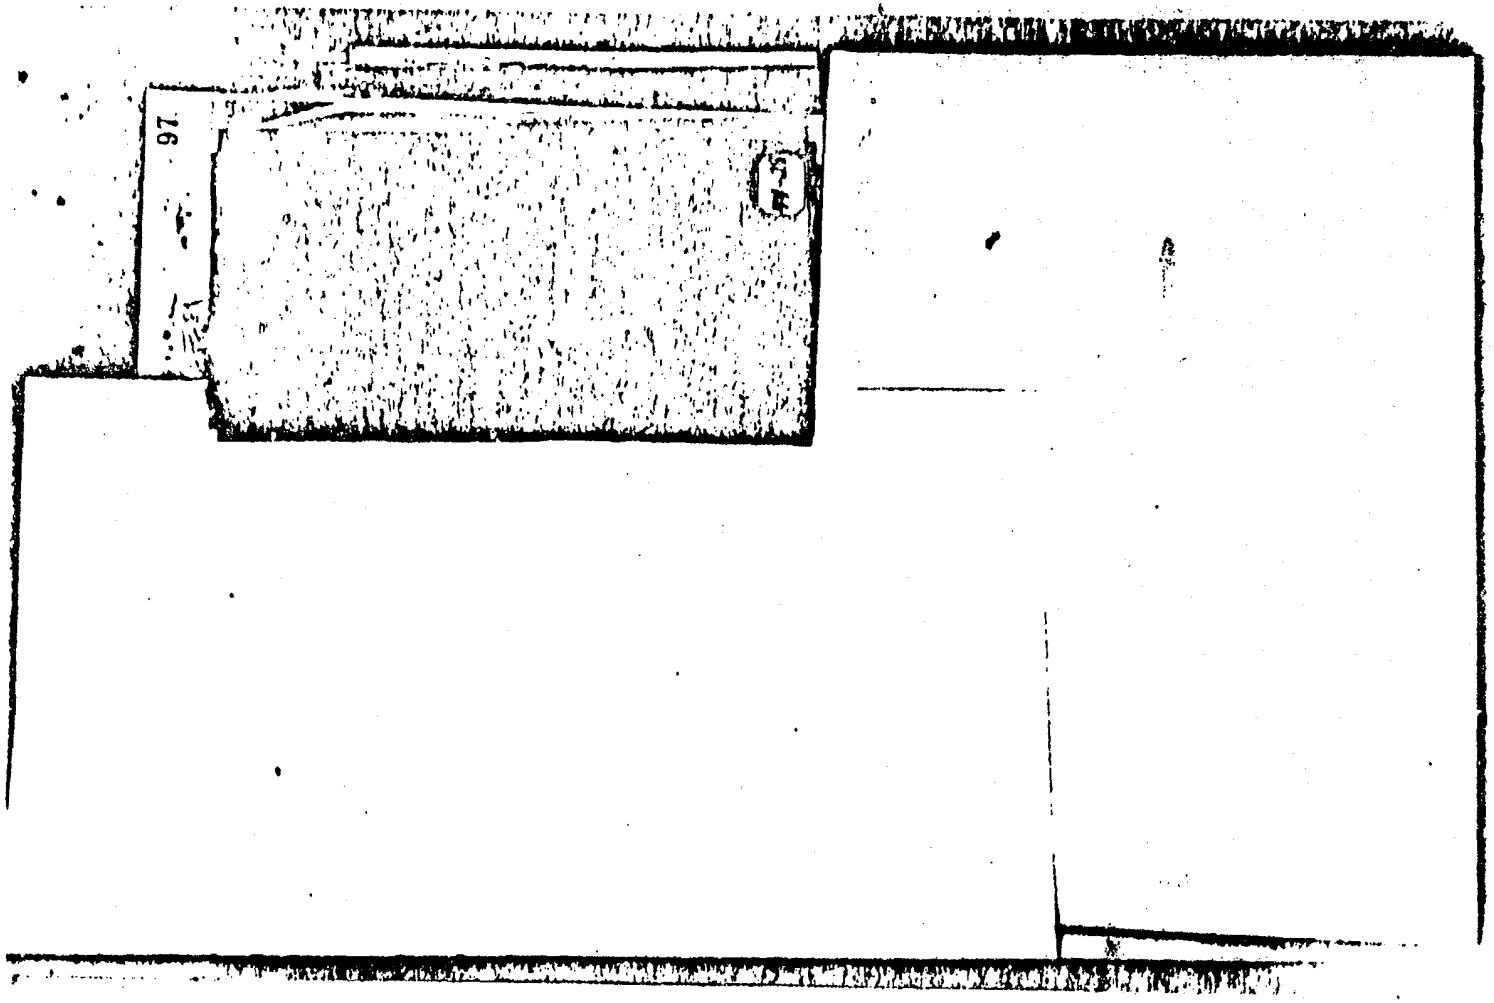

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

NLI 110273

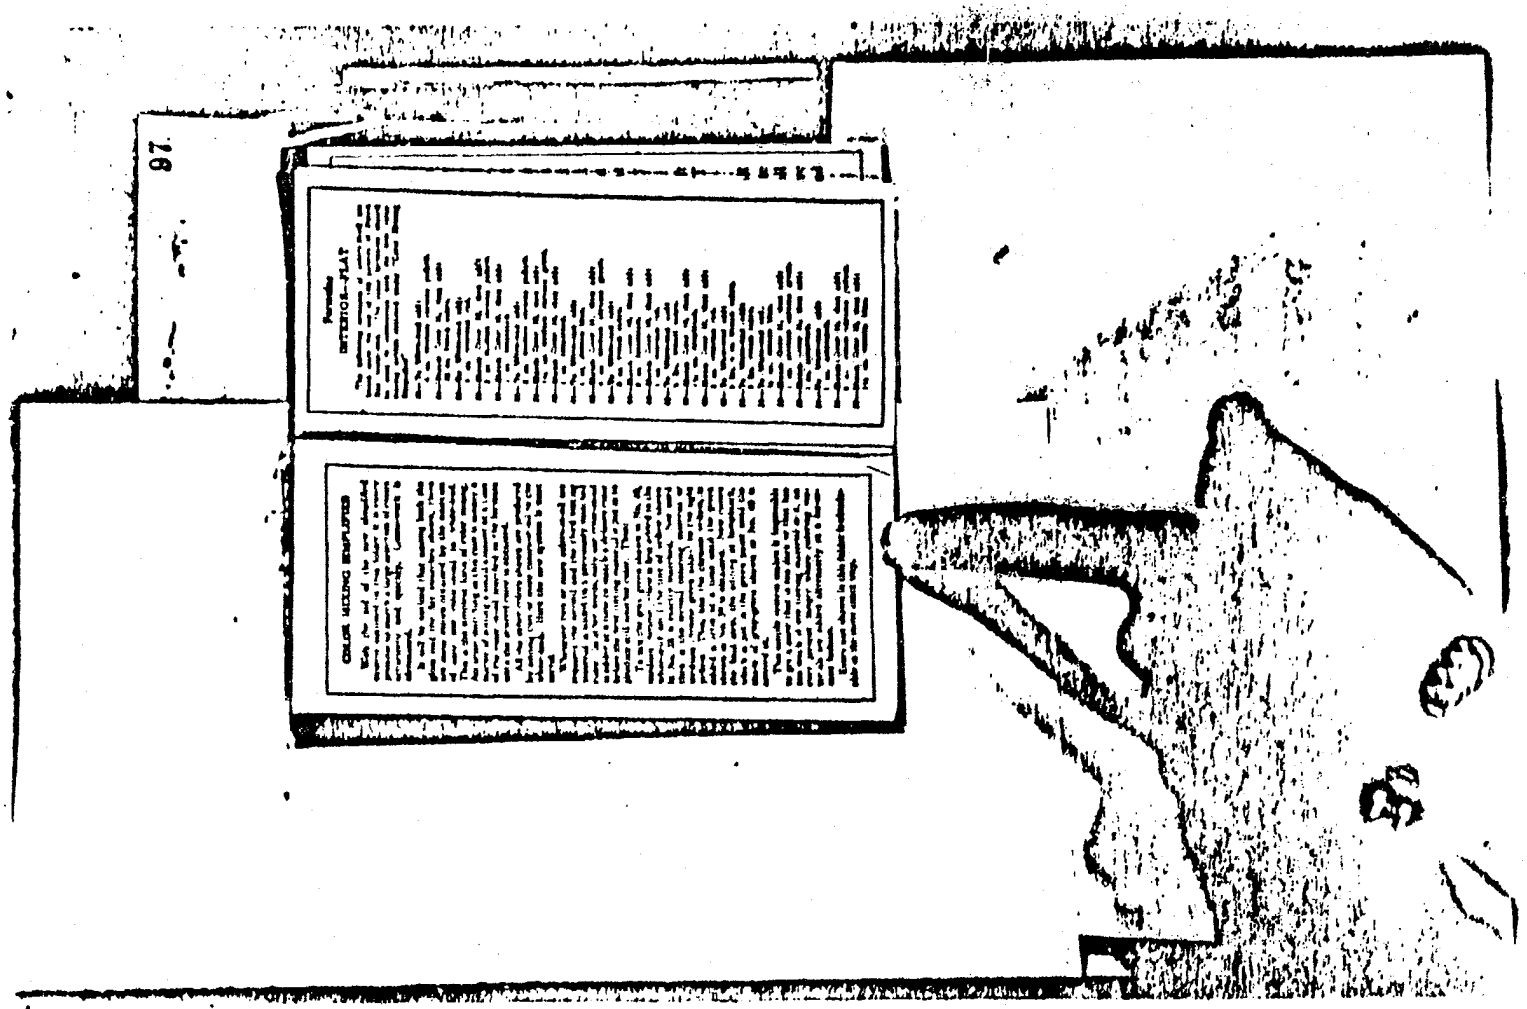

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

NLJ 110274

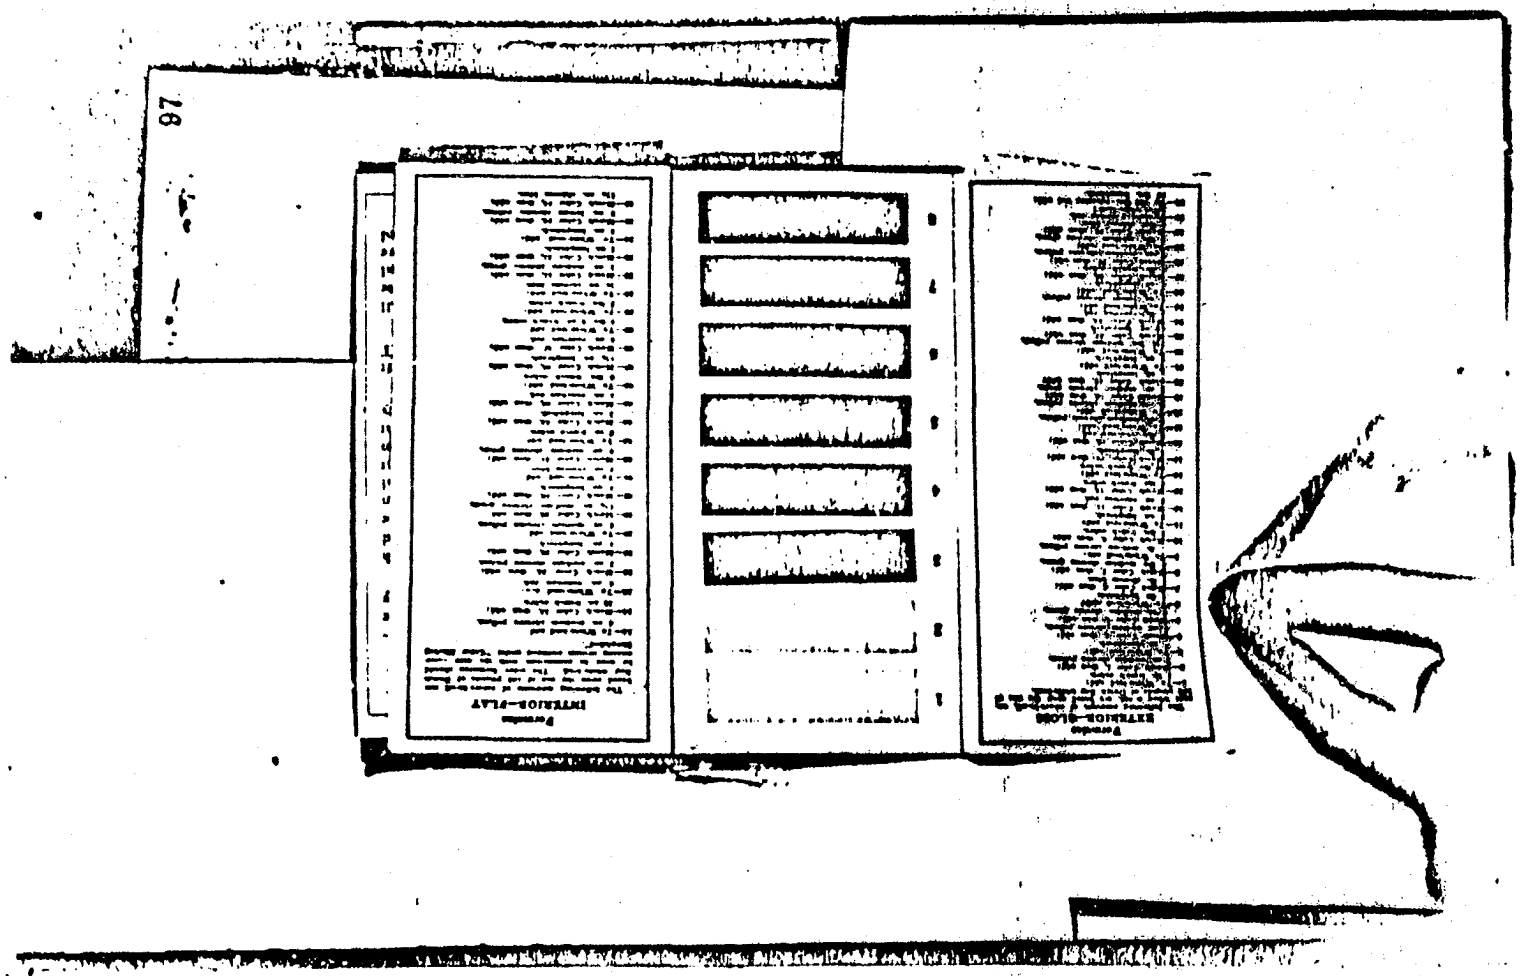

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

NLI 110275

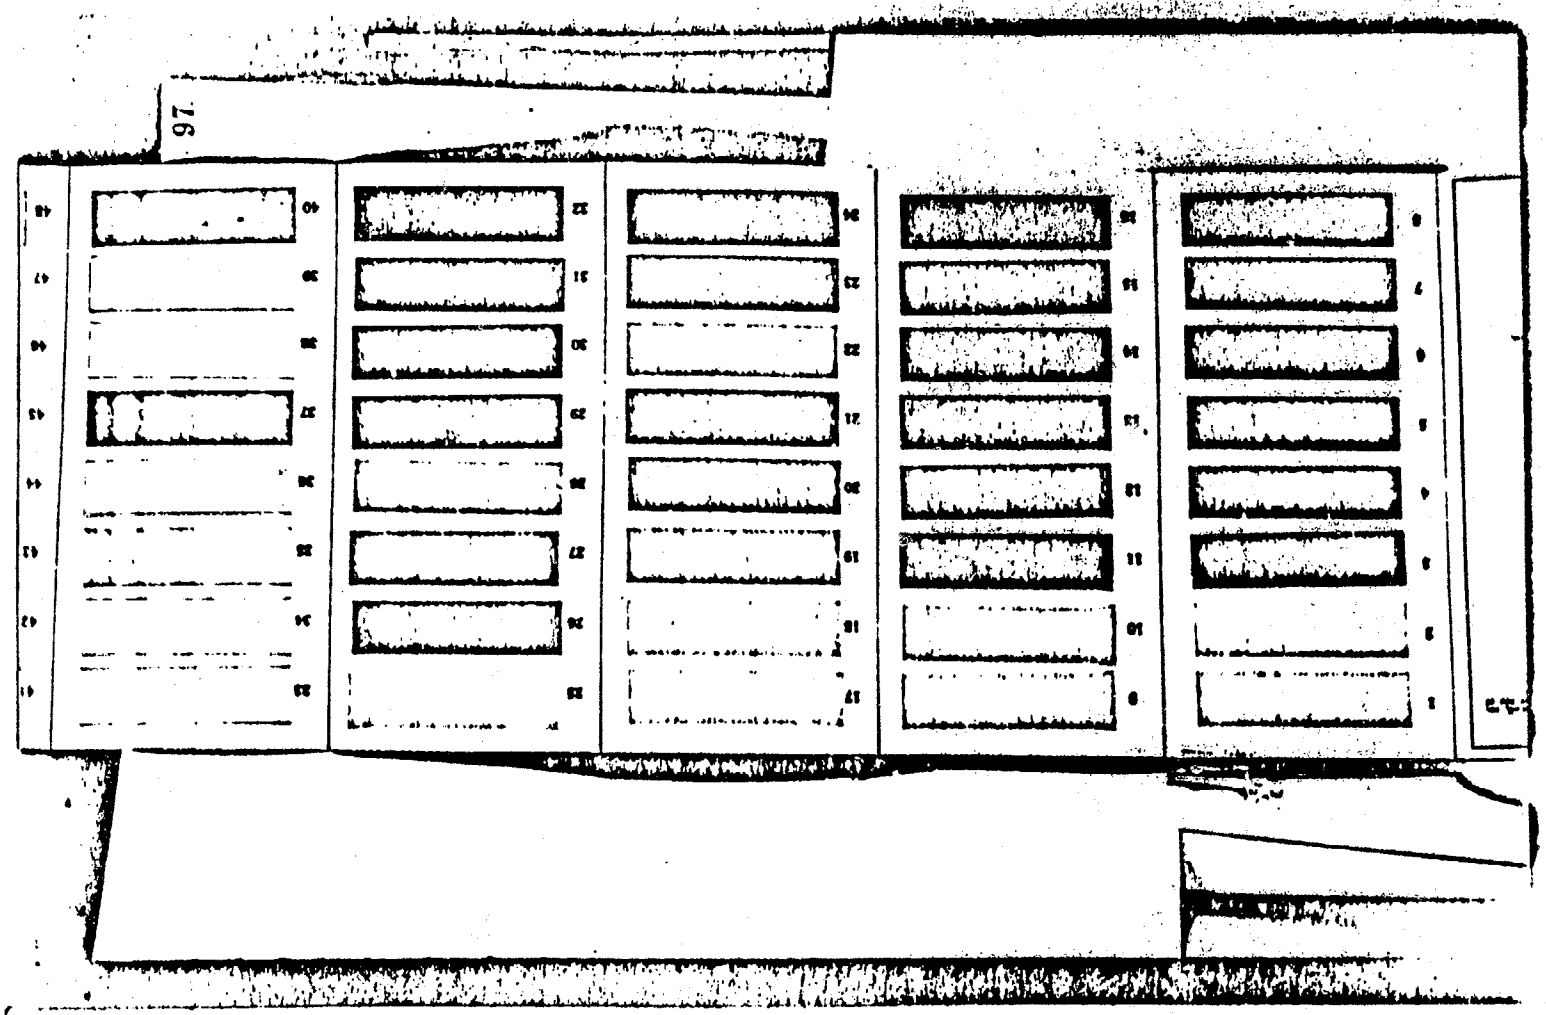

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

NLI 110276

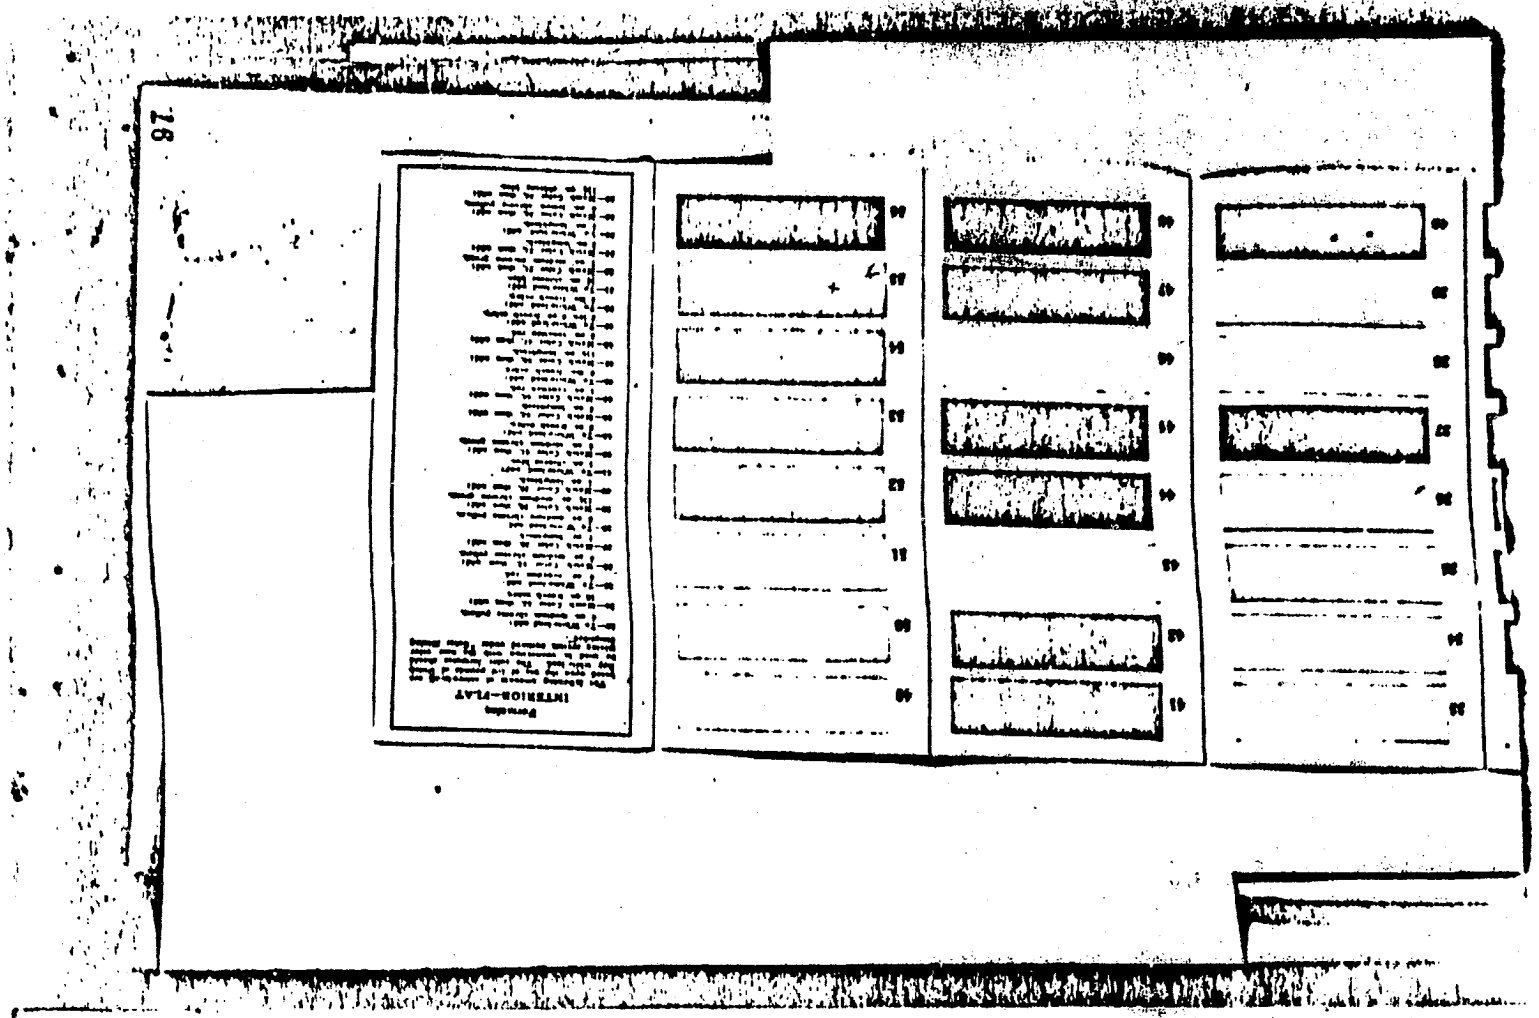

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

00059

NLI 110277

NOTICE: If the film image is less clear than this notice, it is due to the quality of the document being filmed

00059

NLI 110278

97.

IMPORTANT

The paint formulas in this folder are based upon the use of the Heavy Paste form of Dutch Boy White Lead.

When using Soft Paste Dutch Boy White Lead, bear in mind that it contains more oil than the Heavy Paste—almost one gallon more in 100 pounds of paste—and calls for the use of about one pint less of oil in each formula given in this folder. The resulting paint will approximate the consistency of that made from Heavy Paste.

The packages containing Soft Paste are plainly labeled SOFT PASTE on the side.

If a flat effect on inside wall work is desired, the Heavy Paste is to be preferred. The higher oil content of Soft Paste will give more of a sheen to surfaces painted with it.