
APPLICATION
BASIC INSULATION
PIPE AND FITTINGS

CALCIUM SILICATE
SINGLE LAYER:

Fig. 27D

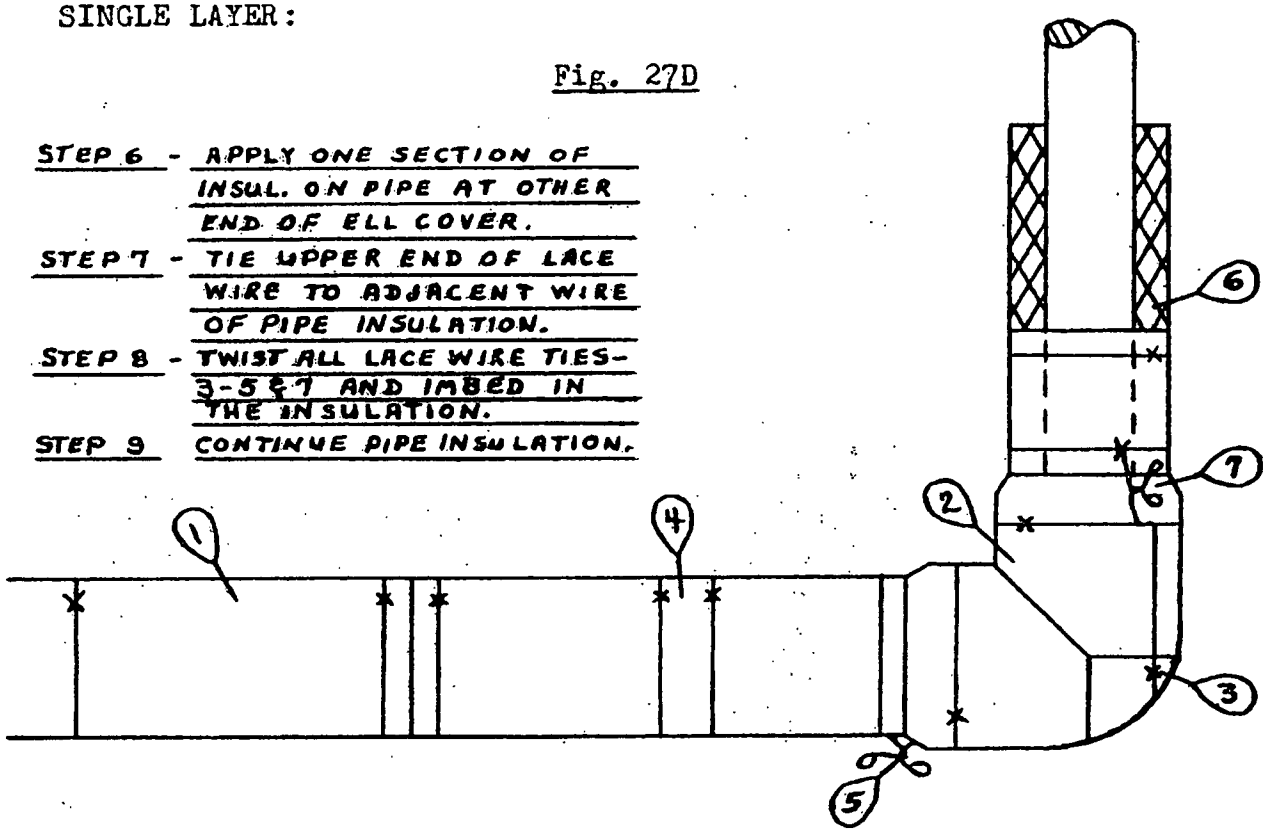

3.2 The miters for a field bent tube turn shall not be applied until the line covering, adjacent to the lower end or the near end of the bend has been run up to the starting point of the arc. Figure 28A.

3.3 The end of the line covering shall be cut square to the pipe. Figure 28A.

3.4 The miters shall then be applied, the last one to be square with the strait pipe at the end point of the arc bend. Figure 28B.

3.5 Figure 28 A, B, C, D, & E. shows the proper sequence of application of a F.B.T.T. and unformed L.R. ell covers.

Fig. 28A

