SPRINGS, HELPER AND SHOCK (Cont.)-160

THESE TWO MODELS FIT OVER 90% OF ALL CARS
These Shock Springs Fit Airplane Type Shocks and Replacement Shocks

1 NO. 3-4471 OR 3-4470 CONSIST OF 1 PAIR OF SHOCK SPRINGS

- Amazing ride control — helps stabilize the car from undue sway on highway curves.
- Vital safety and economy — increases road clearance and driving stability to provide that all-important margin of safety.
- Finest precision quality — the very best spring hardened steel and precision engineering and manufacturing processes insures each spring for durability and dependability.
- Easy installation — no special tools needed.

3-4469	RUBBER SLEEVE ONLY FOR **3-4470**

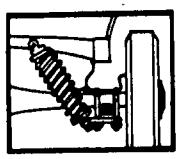

To Guard Against
Hard Steering
Front End Sag
Swaying

3-4471
FRONT SPRINGS

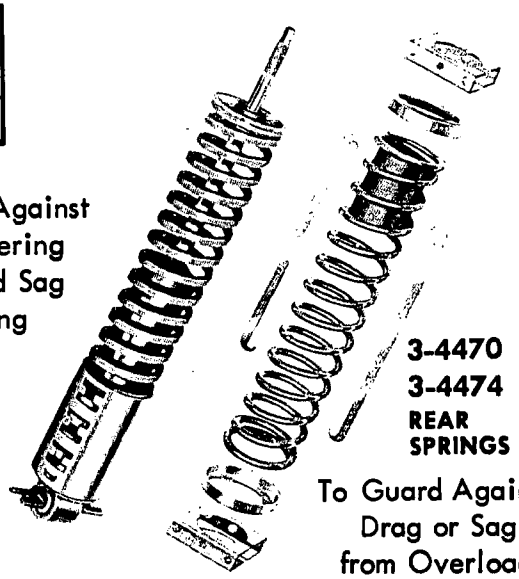

3-4470
3-4474
REAR SPRINGS

To Guard Against
Drag or Sag
from Overload
Car Bottoming
Swaying

CAR APPLICATION

Car	Rear Shock Absorber Springs 3-4470	Models	Front Shock Absorber Springs 3-4471	Models	Coil Over-Load Helpers 3-4472/3-4473	Models	Leaf Helper Springs 3-4465/3-4466	Models
BRONCO	66-68	All	66-68	All	66-68	All	66-68	All
BUICK	56-68	All	54-56, 66-68	All*	61-65	All	-	-
CADILLAC	50-65	All	50-68	All	40-60	All	40-57	All
CAMARO	67-68	All	67-68	All	67-68	All	67-68	All
CHEVROLET	49-68	All (Ex. Corvair)	49-68	All	40-68	(Ex. Corvair & Chevelle)	40-57	All
CHEVROLET TRUCK	-	-	55-68	1/2,3/4 Ton	55-68	1/2, 3/4 Ton	-	-
CHEVY II	62-68	All	62-68	All	64-68	All	62-68	All
CHRYSLER	38-68	All	55-56, 62-65	All	40-68	All	40-68	All
COMET	60-68	All	60-68	All	60-61, 66-68	All	60-68	All
CORVAIR	66-68	-	60-68	All	-	-	-	-
CORVETTE	60-63	All	53-68	All	-	-	-	-
COUGAR	67-68	All	67-68	All	67-68	All	-	-
DESOTO	38-61	All	55-56	All	38-61	All	40-61	All
DODGE	39-68	All	55-56, 62-68	All**	39-68	All	40-68	All
DODGE LANCER	61-62	All	61-63	All	1961	All	61-63	All
DODGE TRUCK	-	-	55-68	1/2,3/4 Ton	55-68	1/2, 3/4 Ton	-	-
EDSEL	58-60	All	58-60	All	58-60	All	58-60	All
FALCON	60-68	All	60-68	All	60-61, 66-68	All	60-68	All
FORD	47-68	(Ex. Mustang)	49-68	All	40-64, 66-68	(Ex. Mustang)	47-65	All (Ex. '65-66 Galaxie)

* (Ex. Riviera) ** Ex. '66 Monaco & Polara

CAN ALSO BE USED ON MOBILE HOMES, TRAILERS AND MOST 1/2 & 3/4 TON PICKUP TRUCKS.