VENTURI ATOMIZER SPRAY DRYER
AZO "D" Hq #183

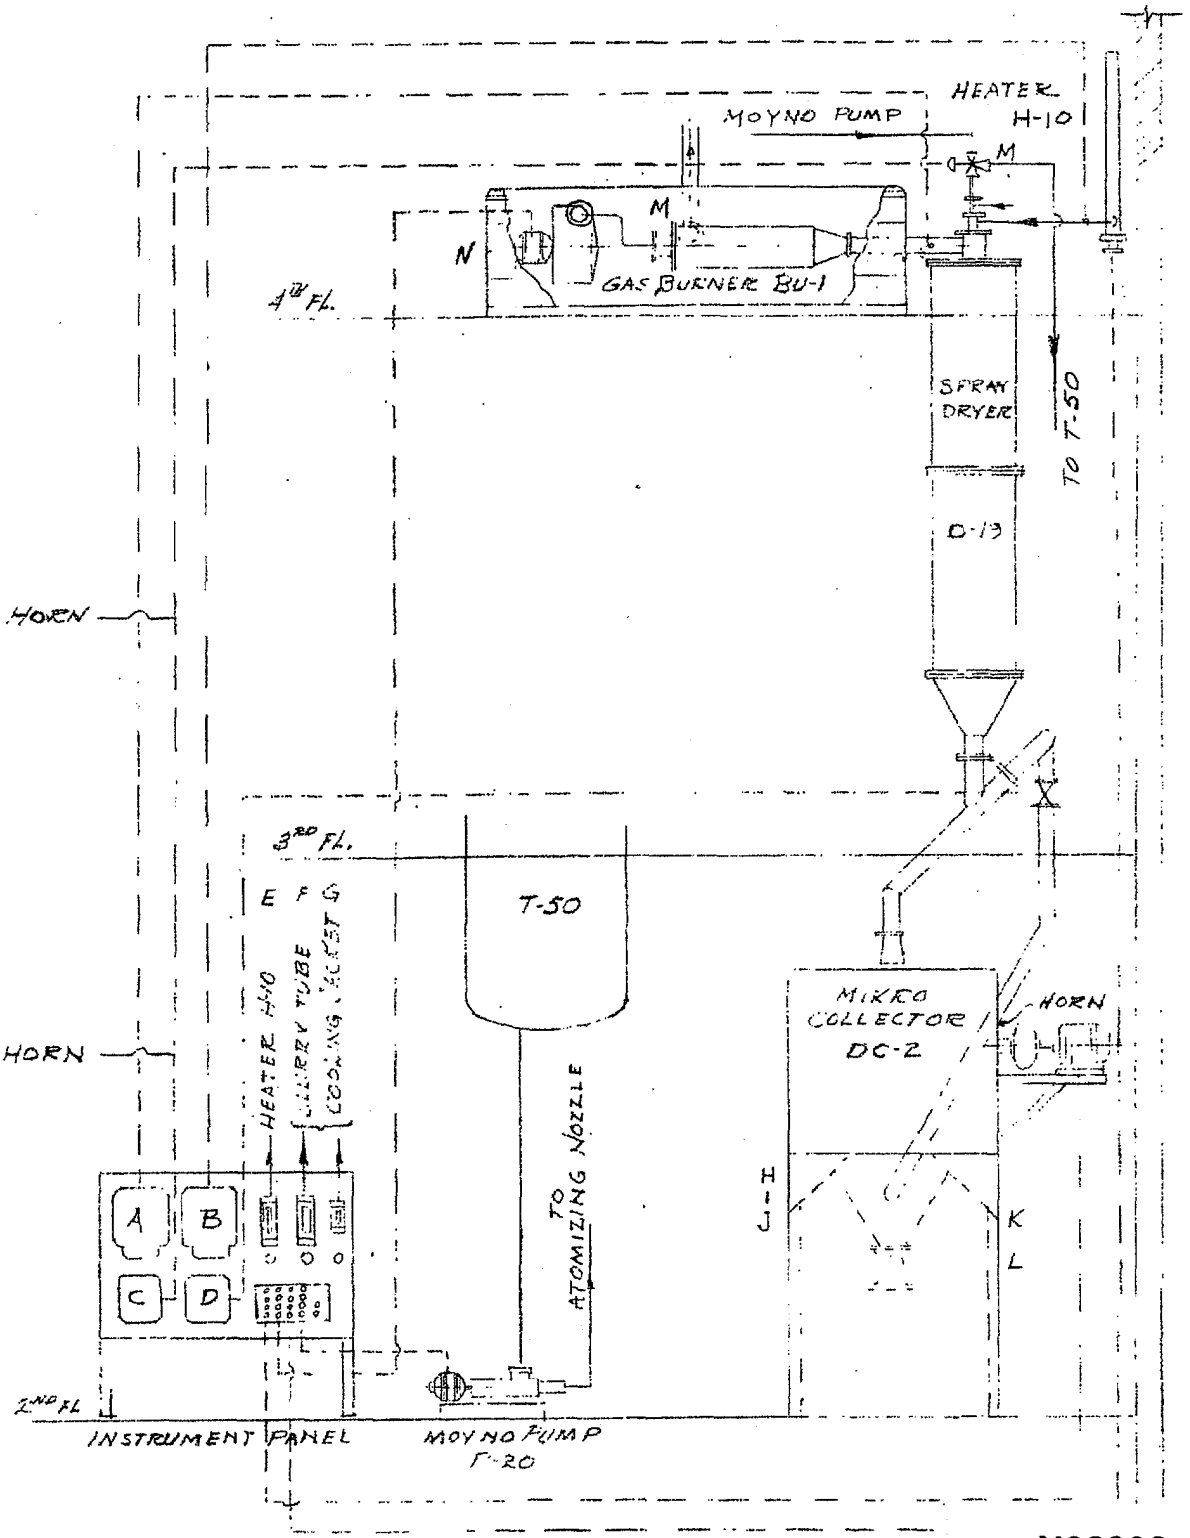

N32992

DUP050467706

"PONSOL" SPRAY DRYER
SETTING FOR OIL ADDITIONS

Drying Rate Lbs/Hr	Off Timer Set Point In Minutes	
	3% Addition	6% Addition
100	14 Min.	7
150	9	4-1/2
200	6-1/2	3-1/4
250	5	2-1/2
300	4	2
400	3	1-1/2
500	2	1

N32992.01

DUP050467707

SPRAY DRYER SAMPLES

Type of Product	Slurry Sample	Cloth Test Before	Cloth Test After	% Moisture	Dry Composite
Intermediates I	1 pint prior to drying to lab.	-	-	Every two hours.	1 quart to lab.
Latyls Disp. Crs. L	1 pint prior to drying to lab.	4 oz. to lab.	4 oz. to lab.	Once per shift.	1 quart to lab.
"Monastrals" M	1 pint prior to drying to lab.	4 oz. to lab.	4 oz. to lab.	Once per shift.	1 quart to lab.
"Ponsol" D Pdrs. P	1 pint prior to drying to lab.	4 oz. to lab.	4 oz. to lab.	Once per shift.	1 quart to lab.
"Sevron" S S	1 pint prior to drying to lab.	-	-	Once per shift.	1 quart to lab.

Note: Slurry sample should be taken just prior to drying, the dry dip must also be taken at this time and recorded both on log card and sample label.