
APPLICATION
BASIC INSULATION

PIPE AND FITTINGS

CALCIUM SILICATE
SINGLE LAYER:

FIG. 48 B BONNET COVERED

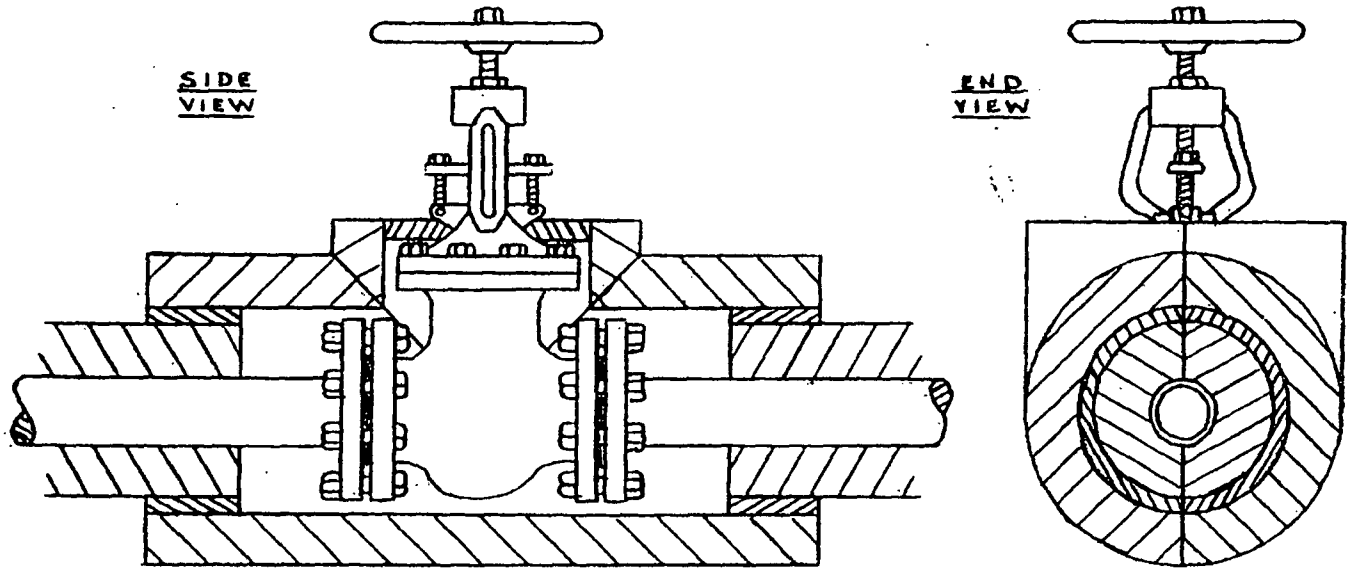

J. 3. Application of portable covers.

3.1 On horizontal fittings, the portable covers shall be positioned and temporarily secured with wire, prior to the application of the adjacent line covering. See 49 A.

3.2 The proper sequence of the application of a portable cover, on a horizontal flange is shown in figures 49 A, B, and C. (This is a typical application sequence for all horizontal portable covers.)

FIG. 49 A — 1ST. STEP

