NAPA **Balkamp**

WEATHERLY 606-236

CATALOG No. BA682AP
September 1968
Supplement To BA68AP

UNIVERSAL
CHOKE CONVERSION KITS

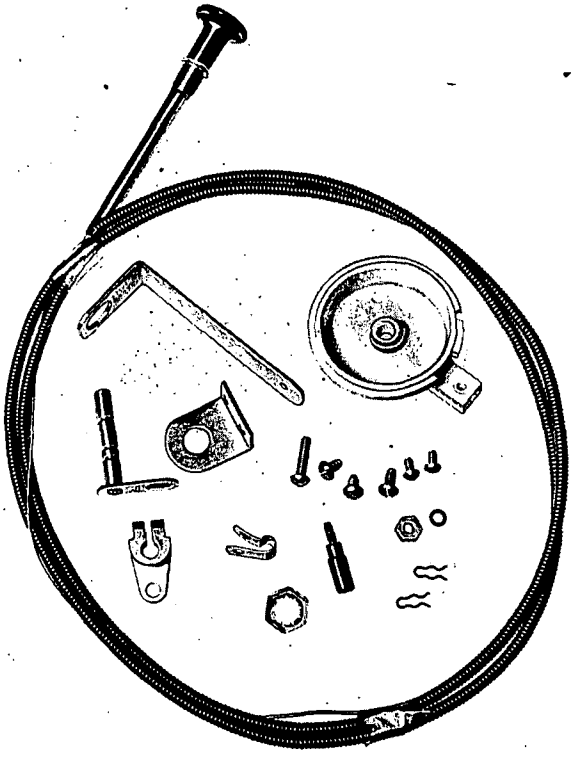



- **HELPS BREAK VAPOR LOCKS**
- **SAVE ON GAS**
- **EASILY INSTALLED**

SEMIAUTOMATIC

3-5461 Fits: Buick, Cadillac, Chevrolet, Oldsmobile, and Pontiac with Rochester and Stromberg Carburetors prior to 1954.

3-5462 Fits: Ford, Mercury, Lincoln, Comet, Fairlane, Meteor, Falcon, Plymouth, Valiant V-8, DeSoto, Dodge, Dart V-8, Chrysler, Imperial, Rambler, and Ambassador; with Ford, Carter, Stromberg, and most Holly Carburetors after 1954.

3-5463 Fits: Plymouth 6, Dodge 6, DeSoto 6 and straight 8, Chrysler 6 and straight 8, Valiant 6, Dart 6, and other cars with non-climatic (well-type) automatic chokes.

3-5467 Fits: Volkswagon, Volkswagon 1200, and Karmann Ghia.

MANUAL

3-5468 Fits: All cars prior to 1964 except Ford 1962-64, and cars using Holley No. 1909 Carburetors.