
APPLICATION
BASIC INSULATION

PIPE AND FITTINGS

CALCIUM SILICATE
SINGLE LAYER:

FIG. 53 D - 4th Step

The cover is secured and the line insulation continued.

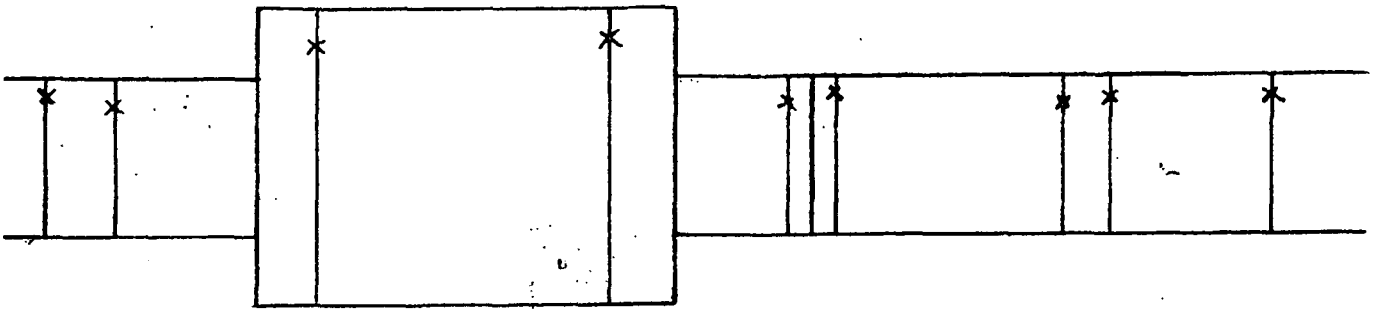

K. Securing Portable Fitting Covers

K. 1. Indoor covers having an O.D. less than 11 inches or a perimeter less than 30 inches shall be secured with 1 inch wide metallic - asbestos tape and 1 inch wide Velcro fasteners. Seefigures 54 A.

1.2 The method for fabricating Velcro-asbestos tape portable cover straps is described in Section VII-B, instruction sheet 6 page 6.

1.3 Indoor covers 11 inches O.D. up to 15 inches O.D. or having a perimeter of 30 inches up to 42 inches, shall be secured with 2 inch wide metallic - "A" tape and 2 inch wide Velcro fastener.

1.4 Indoor covers 15 inches O.D. up to 20 inches O.D., or having a perimeter of 42 inches up to 60 inches, shall be secured with 3/4 inch wide s/s bands and #204 case latch fasteners. Seefigure 54 B.

1.5 Indoor covers having an O.D. above 20 inches or a perimeter of 60 inches or more shall be secured with 1-1/4 inch wide s/s bands and #210 case latch fasteners.