

Monsanto

MONSANTO INDUSTRIAL CHEMICALS CO.
800 N. Lindbergh Boulevard
St. Louis, Missouri 63166
Phone: (314) 894-1000

March, 1972

Gentlemen:

In August, 1971 you were informed that the Therminol® FR series heat transfer fluids, namely FR Lo-Temp, FR-O and FR-1 had been discontinued for all new systems. We did continue to supply the Therminol FR series heat transfer fluids into existing systems as makeup where we were assured that its use was in a non-food related system.

In a continuing effort to prevent any PCB from entering the environment, last December we notified our U.S. customers that the sale of all PCB-containing Therminols, namely Therminol® FR Lo-Temp, FR-O and FR-1, was being discontinued. We are currently extending discontinuation world-wide. We are suggesting that these remaining systems be drained completely, flushed to remove PCB, and refilled with non-PCB fluids. The most likely Monsanto candidates would be Therminol 55 and Therminol 66. We are also asking that all PCB materials be returned to us for disposal.

In most cases this conversion can be accomplished with very little change to the system. It is important, however, to realize that the new fluids are not fire resistant and that protective devices may be necessary for these fluids just the same as for other combustible fluids. Suggestions regarding fire protection and other conversion details are included in the attached "Therminol Conversion" bulletin. We hope this will be helpful to you in answering any questions you receive as co-suppliers in Therminol FR systems.

We again want to ask your cooperation in this period of system conversions and appreciate your continued use and recommendation of the non-PCB containing Therminols, namely 55, 66, 77 and 88.

Should you have questions please contact your local Monsanto representative or me at this location.

Very truly yours,

DSW 434775

J. J. Roder
Product Supervisor
Heat Transfer Fluids

cs

Enclosures:

Conversion Bulletin
Applications Unlimited
Pump Seal Bulletin

16

**THERMINOL®
CONVERSION
BULLETIN**

SP/TC-1

Monsanto

DSW 434776

STLCOPCB4087835

THERMINOL[®] CONVERSION BULLETIN

SP/TC-1

"Nothing contained herein is to be construed as a recommendation to use any product in conflict with any patent. MONSANTO MAKES NO WARRANTIES AS TO THE FITNESS OR MERCHANTABILITY OF ANY PRODUCT REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations, and disclaims all liability for any resulting loss or damage."

**Monsanto Industrial Chemicals Co.
A Unit of Monsanto Company
800 N. Lindbergh Blvd., St. Louis, Mo. 63166**

DSW 434777

STLCOPCB4087836

INTRODUCTION

Therminol FR® fire-resistant heat transfer fluids have long provided safe, dependable, economical performance for hundreds of users in dozens of applications. The presence of poly-chlorinated biphenyl (PCB) in the Therminol FR formulation provided fire-resistance, giving Therminol FR an added margin of safety which was especially desirable in hazardous applications.

Most recently, PCB has been identified as a potential hazard to the environment. Monsanto has accordingly elected to discontinue the manufacture and sale of Therminol FR fluids for heat transfer applications. This bulletin is to inform you about two alternative products sold by Monsanto which do not contain PCB, namely Therminol 55 and Therminol 66.

These products offer most of the excellent heat transfer characteristics of Therminol FR fluids, and even a few additional advantages, such as a lower specific gravity for improved pumpability requiring less horsepower. We would point out that Therminol 55 and 66 are not *fire-resistant* to the extent the Therminol FR fluids were, and due consideration must be given this fact in converting to these newer Therminol fluids. You may wish to consult with your insurers on any conversion from Therminol FR.

Conversion from a Therminol FR fluid to a Therminol 55 or 66 fluid will be a relatively simple, low-cost procedure in the majority of cases. Incorporation of proper fire protection equipment will be the only consideration of major consequence in most cases. But even this modification becomes academic, for with the discontinuation of Therminol FR fluids, fire protection equipment becomes necessary for any and all low pressure heat transfer media available today, since the Therminol FR fluids were unique in their fire-resistance.

Should questions arise with respect to the conversion from Therminol FR fluid, Monsanto's Specialty Products Group invites you to call upon its staff or qualified systems engineers for consultation at any time. Call . . .

(314) 694-2514

and ask for a Monsanto Heat Transfer Specialist.

DSW 434778

STLCOPCB4087837

Therminol 55 and 66 and Your Heat Transfer System

Table 1 shows the typical physical, chemical and thermal properties of Therminol FR-1, Therminol 55 and Therminol 66. As you will note, Therminol 55 and 66 are quite similar except with regard to AIT, Fire Point and density. The substantially lower density of Therminol 55 and 66 means that pumps used in a Therminol FR-1 system should be adequate for a Therminol 55 and 66 system. In most cases, pumping rates will be increased with a resultant saving in horsepower requirements.

TABLE 1
TYPICAL PHYSICAL, CHEMICAL & THERMAL PROPERTIES

	Therminol FR-1	Therminol 66	Therminol 55
Composition	Polychlorinated Biphenyl	Modified Terphenyl	Alkylated Aromatic
Maximum Bulk Temperature Rating (°F.)	600°F.	650°F.	600°F.
Recommended Use Range (°F.)	45 — 575°F.	45 — 635°F.	20 — 575°F.
Pour Point (°F.)	2	—15	—40
Pounds/Gallon (75°F.)	11.55	8.35	7.4
Flash Point (°F.)	350	355	355
Fire Point (°F.)	None to Boiling	374 — 392	410
AIT (°F.)	1206°F.	705	670
Boiling Range (°F.)	620 — 680	644 — 745	635 — 734
Molecular Weight	265	240	340
Expansion Coefficient cc/cc/°F.	0.00031	0.00039	0.00047

Therminol 55 and 66 have outstanding heat transfer properties, so heating and cooling performance will not be sacrificed in a change from Therminol FR-1. The specific heat and thermal conductivity of Therminol 55 and 66 are shown, along with other physical properties, in Tables 2, 3 and 4, and in Figures 1, 2 and 3. The lower pour points of Therminol 55 and 66 will provide easier cold startup of the system.

DSW 434779

TABLE 2
THERMINOL® FR-1
VARIATION OF PROPERTIES WITH TEMPERATURE

Temperature		Density		Specific Heat		Thermal Conductivity		Viscosity		Vapor Pressure	
°F	°C	lb/gal	Kg/m ³	BTU/lb °F	Kcal/Kg °C	BTU/ft hr °F	Kcal/m hr °C	Cp	Cs	mmHg absolute	Kg/cm ²
50	10	11.68	1399.6	0.272	0.272	0.06098	0.0907	308	220	—	—
100	38	11.46	1372.7	0.282	0.282	0.06060	0.0902	23.2	16.9	—	—
150	66	11.22	1343.7	0.291	0.291	0.06021	0.0896	6.6	4.9	—	—
200	93	10.99	1316.7	0.3047	0.3047	0.05976	0.0889	3.4	2.6	—	—
250	121	10.76	1289.1	0.3151	0.3151	0.05927	0.0882	2.3	1.8	—	—
300	149	10.53	1261.3	0.3255	0.3255	0.05875	0.0874	1.4	1.1	—	—
350	177	10.30	1233.5	0.3359	0.3359	0.05819	0.0866	1.0	0.8	10	0.0136
400	204	10.07	1205.8	0.3464	0.3464	0.05760	0.0857	0.8	0.7	27	0.0367
450	232	9.83	1178.0	0.3568	0.3568	0.05697	0.0848	0.6	0.5	65	0.0884
500	260	9.60	1150.2	0.3672	0.3672	0.05630	0.0838	0.5	0.4	143	0.1945
550	288	9.37	1122.5	0.3776	0.3776	0.05560	0.0827	0.4	0.4	291	0.3958
600	316	9.14	1094.7	0.3880	0.3880	0.05487	0.0817	0.4	0.3	550	0.7480
650	343	8.91	1066.9	0.3985	0.3985	0.05409	0.0805	0.3	0.3	18.8psia	1.3218
700	371	8.68	1039.3	0.4089	0.4089	0.05329	0.0793	0.3	0.3	31.9psia	2.2429


TABLE 3
THERMINOL® 66
VARIATION OF PROPERTIES WITH TEMPERATURE

Temperature		Density		Specific Heat		Thermal Conductivity		Viscosity		Vapor Pressure	
°F	°C	lb/gal	Kg/m ³	BTU/lb °F	Kcal/Kg °C	BTU/ft hr °F	Kcal/m hr °C	Cp	Cs	mmHg absolute	Kg/cm ²
0		8.67	1040	0.320	0.320	0.0720	0.1072	62000	50000	—	—
50	10	8.51	1020	0.350	0.350	0.0711	0.1058	255	250	—	—
100	38	8.34	1000	0.380	0.380	0.0703	0.1046	28.0	28.0	—	—
150	66	8.14	975	0.405	0.405	0.0695	0.1034	9.75	10.0	—	—
200	93	7.91	950	0.430	0.430	0.0687	0.1022	4.18	4.40	0.1	—
250	121	7.77	930	0.455	0.455	0.0678	0.1008	2.42	2.60	—	—
300	149	7.59	910	0.480	0.480	0.0670	0.0997	1.55	1.70	2.0	0.003
350	177	7.39	885	0.505	0.505	0.0662	0.0985	1.06	1.20	—	—
400	204	7.17	860	0.530	0.530	0.0653	0.0972	0.77	0.90	20.0	0.027
450	232	7.04	840	0.555	0.555	0.0645	0.0959	0.58	0.69	50.0	0.068
500	260	6.75	810	0.580	0.580	0.0637	0.0948	0.45	0.55	100.0	0.136
550	288	6.62	793	0.605	0.605	0.0628	0.0935	0.36	0.46	200.0	0.272
600	316	6.42	770	0.630	0.630	0.0620	0.0923	0.34	0.44	350.0	0.476
650	343	6.24	750	0.655	0.655	0.0613	0.0912	0.27	0.36	760.0	1.034
700	371	6.09	730	0.680	0.680	0.0605	0.0900	0.20	0.28	1000	1.360

TABLE 4
THERMINOL® 55
VARIATION OF PROPERTIES WITH TEMPERATURE

Temperature		Density		Specific Heat		Thermal Conductivity		Viscosity		Vapor Pressure	
°F	°C	lb/gal	Kg/m ³	BTU/lb °F	Kcal/Kg °C	BTU/ft hr °F	Kcal/m hr °C	Cp	Cs	mmHg absolute	Kg/cm ²
0	-18	7.62	915	0.420	0.420	0.0813	0.1210	1472	1610	—	—
100	38	7.31	878	0.472	0.472	0.0784	0.1167	25.4	30.1	0.5	0.001
200	93	7.00	840	0.522	0.522	0.0753	0.1121	4.20	5.0	3.0	0.004
300	149	6.69	803	0.572	0.572	0.0724	0.1077	1.69	2.10	10	0.014
400	204	6.39	766	0.620	0.620	0.0692	0.1030	0.904	1.18	40	0.054
500	260	6.07	729	0.670	0.670	0.0661	0.0984	0.583	0.80	100	0.136
600	316	5.76	691	0.718	0.718	0.0630	0.0938	0.415	0.60	250	0.330

FIGURE 1
THERMINOL® FR-1
PHYSICAL PROPERTIES

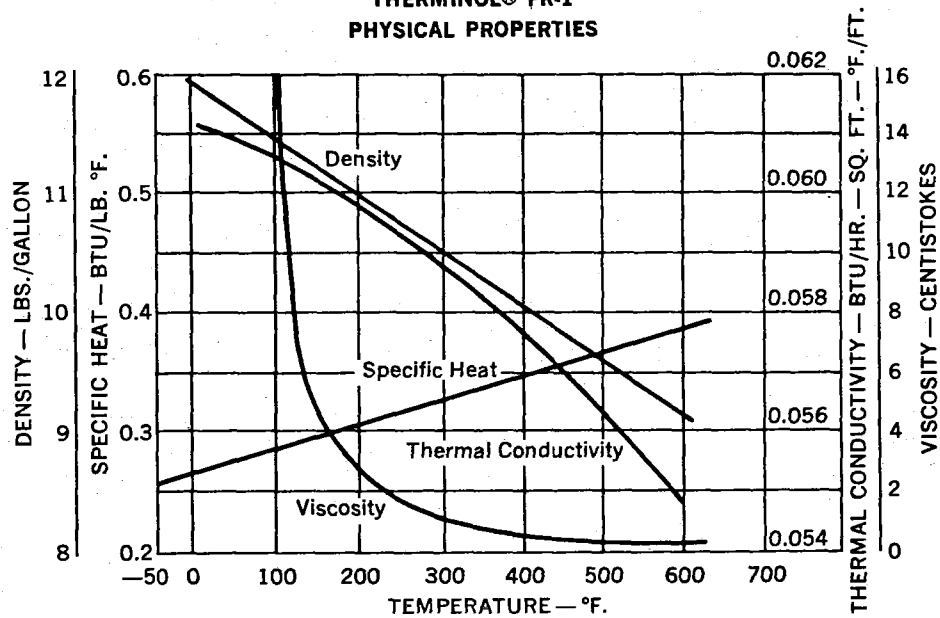

DSW 434781

FIGURE 2
THERMINOL® 66
PHYSICAL PROPERTIES


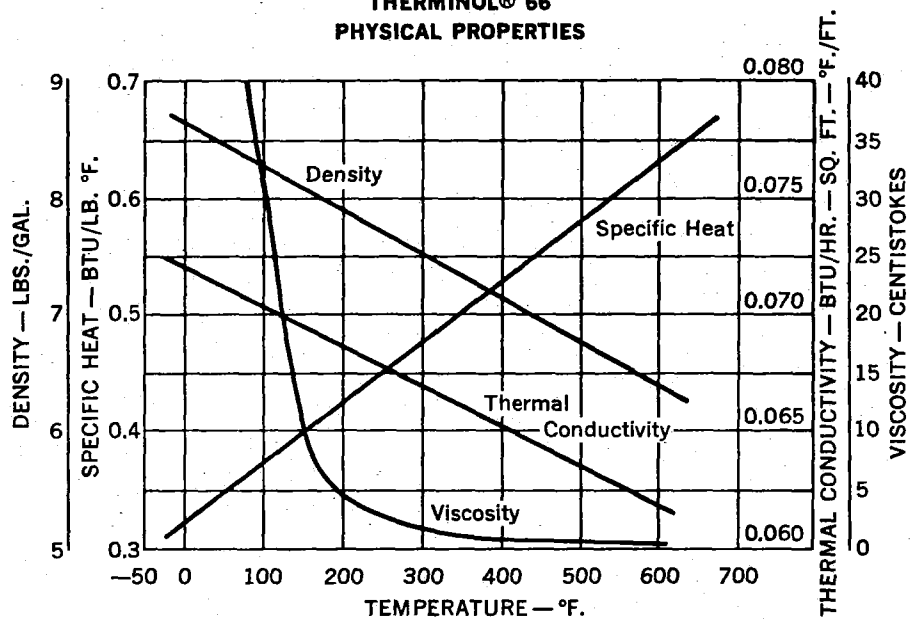


FIGURE 3
THERMINOL® 55
PHYSICAL PROPERTIES

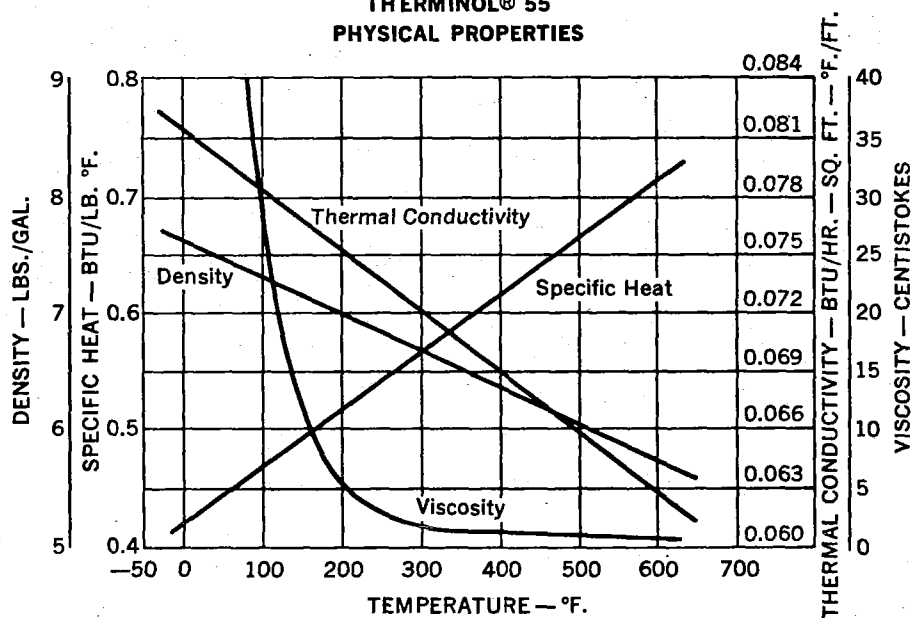

Generally speaking, then, a well designed system currently operating on Therminol FR-1 can be converted to Therminol 55 and 66 with few, if any, basic changes in design — and without sacrifice to heat transfer efficiency. With the similarity of the heat transfer properties of the three fluids thus established, let us turn to the important differences between Therminol FR-1 and Therminol 55 and 66: namely, *fire-resistance* and *oxidation-resistance*.

Fire-Resistance

As stated in the Introduction to this bulletin, the Therminol FR fluids were unique in their inherent fire-resistance. No other commonly used heat transfer medium could be so classified. Even so, the Therminol FR fluids could be made to burn under certain conditions, as indicated by their AIT of about 1200°F.

It is important to realize that Therminol 55 and 66 are less fire-resistant than Therminol FR-1, and to modify the heat transfer system accordingly; it is equally important to understand that Therminol 55 and 66 are *not* volatile, highly flammable fluids, but rather combustible as defined by FM and NFPA (NFPA No. 321).

Protecting the System

There are two major fire protection considerations in changing to Therminol 55 or 66 — *system leakage* and possible *tube rupture* (in the heater). The former is actually part of the larger subject of good system maintenance, and should be considered *regardless* of the heat transfer medium employed. A tight, well-maintained system is usually a good, safe system! Following are some suggestions to prevent leakage when you convert to Therminol 55 or 66.

First, if your system has rotary mechanical seals, you should provide a spray shield and a drip pan with a drain to a collection sump. Canned and seal-less pumps offer excellent protection against leakage.

The best way to prevent piping leakage is to weld all connections. Where you must have access, use raised-face flanges with appropriate gasketing and high-temperature bolting. Control of piping leaks is especially important, since fluid-soaked insulation poses a more serious hazard than the leaking fluid, itself.

Organic compounds such as Therminol 55 and 66 exhibit a slow oxidation reaction with the air trapped inside the voids of the insulating material when system temperatures reach about 500°F. Saturated insulation offers a large fuel surface in the face of poor heat dissipation conditions, and this, along with possible catalysis from the insulating material (magnesia, silicate-bonded asbestos or calcium silicate) can cause a temperature build-up in the mass. This temperature build-up can result in ignition of the fluid when the space between the piping and the saturated insulation is exposed to air (i.e., should the insulation be broken for repair, etc.).

This phenomenon is not fully understood, but appears to occur less with closed cell insulation than with the insulating materials mentioned

above. Closed cell materials, then, are preferred, especially where leakage is a possibility despite all precautions.

The principle problem areas are near instrument connections, valve packing glands, flanges, and where cracks develop in relatively impermeable insulation cement adjacent to oil soaked insulation.

To obviate this problem, eliminate any source of leakage promptly. Replace leaky gaskets, oil soaked insulation, and re-pack valve stems. Cover insulation where leaks might occur with a hydraulic setting, oil-resistant cement. Install valves, where possible, with the stems in a horizontal position so that leaks will drip *away* from the insulation. And again, use closed cell insulating materials on suspect piping areas.

Tube Rupture in Fired Heaters

Generally speaking, where fire protection is concerned, it is best to consult your insurance underwriter for guidance and counsel. Likewise, you will want to discuss your fire safety equipment requirements with qualified suppliers of fire protection equipment. Selection and sizing of fire protection equipment is important to safeguard the installation.

A commonly used method of preventing fire in the event of tube rupture in fired heaters is piping steam or CO₂ as a snuffer into the combustion chamber of the heater. Usually a properly-sized line with a *remote* manual valve for activation is the preferred arrangement. This snuffer system could be automated by the use of an exhaust stack temperature switch. This switch would then energize a solenoid valve and alarm upon excessive temperature rise, automatically flooding the chamber with a fire extinguishing agent.

In practice the temperature switch is often set about 100°F. *over* the normal exhaust temperature to prevent nuisance shutdowns. Where steam snuffer systems are used, it is a good idea to employ a steam trap to avoid slugging the combustion chamber with water when the system activates, or is activated manually.

You can obtain a basic guideline in the selection of CO₂ protection equipment (again, it is best to consult your insurance underwriter) from the National Fire Protection Assn., 60 Batterymarch Street, Boston, Mass. 02110 AC 617-482-8755. NFPA Bulletin No. 12 dated 1968 should be requested. This bulletin should be helpful in determining the amount of CO₂ and the concentration of CO₂ needed to extinguish a fire based on your specific application.

CO₂ cylinders are available from Cardox Division of Chemetron, Chicago, Ill. as well as other suppliers. Some standard sizes are 50, 75, 100 and 150 pound cylinders. Prices usually include drawings of the units, fully charged cylinders, flexible piping connectors, spray nozzle, pressure switch, alarm *and automatic control, provided CO₂ release signal is supplied by customer device.* Piping, wiring, and installation labor to be provided by the customer. Recharging of spent cylinders is available at an additional cost from a variety of "Fire & Safety Equipment Suppliers" listed in the Yellow Pages of your phone book.

Selection of all equipment and installation recommendations should be obtained from qualified suppliers; however, it is important to insure that sufficient CO₂ is available to prevent re-ignition while the heater is cooling.

The Halon Fire Suppression System is a possible alternative to a CO₂ arrangement because it can be used in closed spaces with personnel in the area. One supplier of Halon systems is the Cardox Division of Chemetron Corporation, Chicago, Ill. 60611.

Again, we strongly recommend that the advice of fire protection companies be solicited in either case to insure proper equipment selection and installation.

If steam is to be used rather than the other alternatives suggested above, please refer to the NFPA Volume I, Section 86A (1970-1971) to obtain the volume of steam required.

Oxidation-Resistance

With a Therminol 55 or 66 system, some provision should be made to prevent oxidation caused by air contact at fluid temperatures exceeding 200°F. This was not the case with Therminol FR fluids, but must be observed for Therminol 55 and Therminol 66. Oxidation can result in sludge formation, eventually leading to carbonaceous deposits on heat transfer surfaces and at mechanical seal faces.

Oxidation of fluid can develop by air contact in an open, vented expansion tank. Therefore, we recommended that the expansion tank be blanketed with an inert gas (such as nitrogen) as shown in Figure 4. If this is not possible, air contact can be minimized by a cold seal arrangement as shown in Figure 5. An inert gas pressure of one to two psi is adequate, as Therminol 55 and 66 do not require pressurization to maintain liquid phase.

FIGURE 4
SUGGESTED INERT GAS ARRANGEMENT
FOR EXPANSION TANK


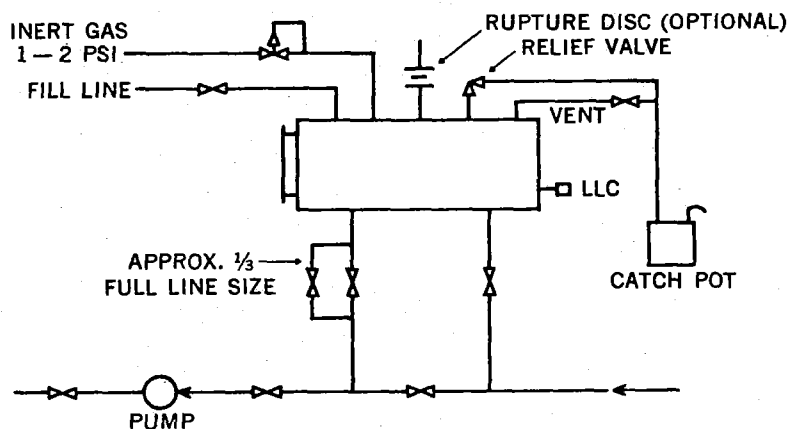


FIGURE 5
SUGGESTED COLD SEAL TRAP ARRANGEMENT
FOR EXPANSION TANK

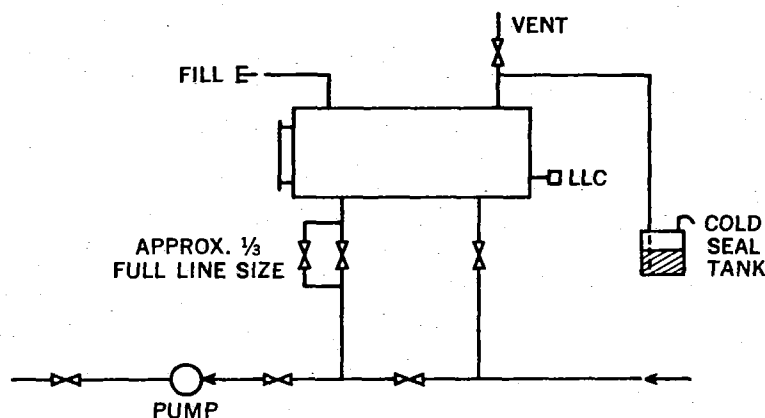

You can design the cold seal arrangement quite simply by piping the expansion tank vent to a second tank where the vent line projects subsurface and can be flooded with additional Therminol 55 or 66 to minimize air contact in the expansion tank vapor space.

In converting from Therminol FR to Therminol 55 or 66, it is important to remember that many Therminol FR systems were designed with a hot bleed line into the expansion tank to eliminate moisture accumulation. Moisture accumulation in the presence of hydrogen chloride gas released during the decomposition of the FR fluids could contribute to acidity problems. This is not the case with Therminol 55 or 66; *therefore, this bleed line should not be used during normal operation of a Therminol 55 or 66 system.* This line should be *valved off* during operation but it could be retained as a convenient means of venting the system during initial startup after conversion.

Further protection against a hot expansion tank occurrence would be the removal of any expansion tank insulation and feeder line insulation.

Carbonaceous deposits can also occur at the pump seal face due to leakage at high temperatures. The use of a seal flush system or a double mechanical seal is helpful in preventing excessive seal wear.

Converting to Therminol 55 and 66

With fire-protection and oxidation-resistance procedures well in mind, let us turn to the matter of preparing the Therminol FR system for Therminol 55 or 66.

Accumulation of debris over the years in the system could cause serious problems, especially to mechanical seals, rotary joints, etc. All heat transfer systems should be cleaned from time to time as a part of normal preventive maintenance. Since a fluid change is neces-

sary at this time, it would seem practical to use the downtime to thoroughly clean the system prior to startup on a fresh charge of fluid.

We strongly advise you *not* to simply drain and change, but to take this opportunity to clean your system. Many potential problems will be prevented by so doing.

Another reason for cleaning your system at this time is to assure complete removal of the Therminol FR fluid. A system cleanout is the only sure way to do so. How to go about the cleanout is a matter of choice, but here are some alternatives for your consideration:

A. *Fluid Flush Cleaning*

This method is probably the fastest and most effective where heating surfaces are not heavily fouled. It also offers the advantage of not having to introduce foreign chemicals into the system.

With this method, the system is drained of Therminol FR, re-filled with Therminol 55 or 66, operated for a reasonable period of time, drained once again, and finally, recharged with fresh Therminol 55 or 66.

Both the drained Therminol FR and the Therminol 55 or 66 used to flush the system may then be returned to Monsanto for disposal.

B. *Solvent Cleaning*

This method is satisfactory for cleaning a slightly soiled system, but chlorinated solvents must be avoided. Typical solvents used are benzene, and xylol (caution should be used with low flash point solvents). Do not use trichlorobenzene or perchloroethylene. (CAUTION: ALL SOLVENTS SHOULD BE COMPLETELY REMOVED FROM THE SYSTEM PRIOR TO OPERATING AT HIGH TEMPERATURES). Normally this is accomplished by drying the residual with warm air or by operating the refilled Therminol system at a temperature slightly above the boiling point of the solvent until the residual is vented from the system. Some *caution* should be used in drying the system to prevent flashing of the solvent with resultant discharge of Therminol from the system. Both the drained Therminol FR and the flushing solvent may then be returned to Monsanto for disposal.

Fluid Disposal

Monsanto offers an incineration service for the disposal of PCB heat transfer fluids and the flushing fluids mentioned above. For details of this service and how to return fluids to Monsanto for disposal, please write:

Monsanto Company

P.O. Box 14617

St. Louis, Missouri 63178

... or call (314) 694-2514 and ask for a Monsanto Heat Transfer Specialist.

DSW 434787

Handling: General Information

Heat transfer fluids are intended only for indirect heating purposes. Under no circumstances should any Therminol heat transfer fluid be allowed to come in contact with or in any way contaminate food, animal feed, food products, food packaging materials, food handling equipment, pharmaceuticals or *any* food-related items.

Therminol 55 and Therminol 66: Safety of Handling

According to the definitions of the U.S. Federal Hazardous Substances Labeling Act, Therminol 55 and 66 are not toxic substances since the oral and dermal lethal doses in animals are greater than 5 grams per kilogram of body weight. Additional animal studies indicate that they do not have significant skin or eye irritation potential. It is suggested however, that good industrial practice relating to the avoidance of repeated and prolonged skin contact to any industrial chemical, heat transfer fluids, or petroleum product be followed.

Therminol 55 and 66 have such low vapor pressures at ambient temperature that inhalation of vapors during transfer of fluid from shipping containers to a heat transfer system presents no hazard. Vapors emitted by either fluid at elevated temperatures may be irritating as would be the case with excessively heated petroleum oils. In heat transfer installations, the fluids are used in a closed, unpressurized system free from leaks and with the expansion tank vent trapped so as to condense any vapors and thus prevent their escape to the work environment. Consequently, there should be little or no opportunity for workers to experience any contact or exposure.

While it is believed that Therminol 55 and 66 pose no serious problems with respect to the environment, as a concerned supplier to industry, Monsanto urges the user to maintain a tight system, to correct leakage promptly, and to exercise care in the handling and disposal of this and all other such products. A tight maintenance program not only protects the environment, but keeps employees comfortable, the working area clean, and the system running smoothly.

DSW 434788

CUSTOMER SERVICE CENTERS

AKRON, OHIO 44313

260 Springside Drive
Montrose Development Park
Tel. (216) 666-4111

ATLANTA, GEORGIA 30339

320 Interstate North Parkway
Suite 500
Tel. (404) 432-7111

BOSTON, MASSACHUSETTS 02149

Everett Station
Tel. (617) 387-5010

CHICAGO, ILLINOIS

3158 Des Plaines Ave.
Des Plaines, Illinois 60018
Tel. (312) 296-6688

CINCINNATI, OHIO 45206

1501 Madison Road
Tel. (513) 751-6707

DETROIT, MICHIGAN

500 Northland Towers West
Southfield, Michigan 48075
Tel. (313) 357-0910

HOUSTON, TEXAS 77027

1301 Post Oak Tower
5051 Westheimer Road
Tel. (713) 621-9550

LOS ANGELES, CALIFORNIA 90022

6670 E. Flotilla St.
Tel. (213) 723-2492

NEW YORK, NEW YORK 10036

1114 Avenue of the Americas
Tel. (212) 764-5000

ST. LOUIS, MISSOURI 63166

800 N. Lindbergh Blvd.
Tel. (314) 694-1000

SAN FRANCISCO BAY AREA

2710 Lafayette
Santa Clara, California 95052
Tel. (408) 243-0414

SEATTLE, WASHINGTON 98121

2112 Third Avenue
Tel. (206) 622-4203

WILMINGTON, DELAWARE 19810

Suite 204, Bancroft Bldg.
3411 Silverside Road
Tel. (302) 478-4600

Monsanto Industrial Chemicals Co.

A Unit of Monsanto Company

800 N. Lindbergh Blvd., St. Louis, Mo. 63166



Monsanto

DSW 434790


Monsanto

800 N. LINDBERGH BLVD., ST. LOUIS, MISSOURI 63166


STLCOPCB4087849

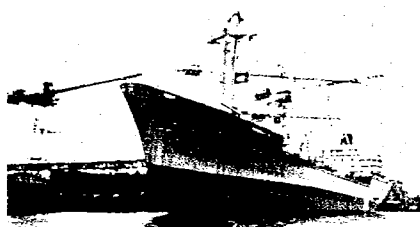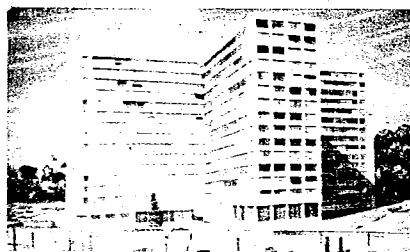

terminal.
**applications
unlimited**

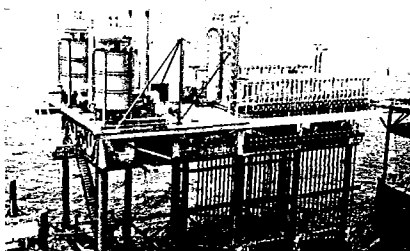

Monsanto

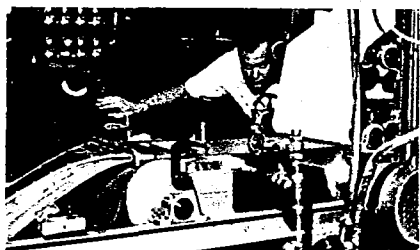

DSW 434791


O/FF-15R

STLCOPCB4087850


Why Therminol?

Does your process require indirect heating — that is, high working temperatures delivered to remote "user" locations without flame? Perhaps your process requires indirect heating and cooling within the same system. Or, maybe you'd like to get more out of your process heat by using it in a nearby space heating application, as well.


There are a number of ways to get these jobs done. A common one involves the use of a pres-

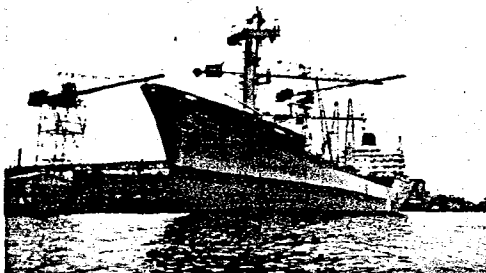


This Dutch tanker uses a Therminol system to heat living quarters as well as cargo.

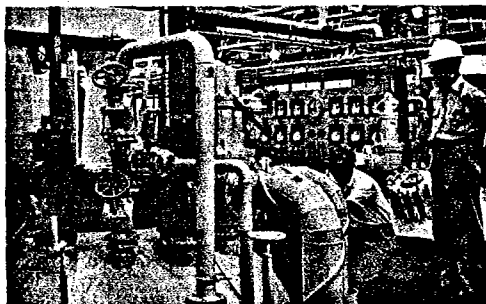

Several resin kettles with various heat needs can be heated from one Therminol system.

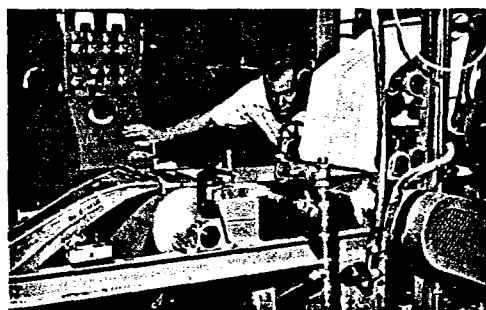

Rolls in rubber, plastics, textiles and paper get uniform heat with Therminol.

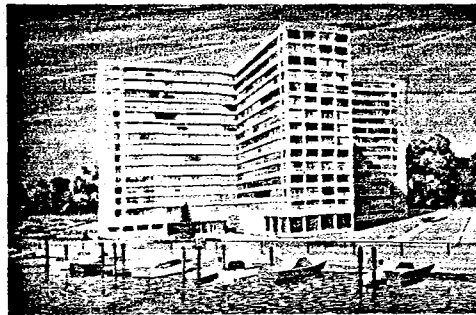


Apartment buildings, offices, hospitals—buildings of all kinds find Therminol an economical alternative to steam.


surized heating system — water (or other liquids) heated to the vapor phase and transferred under high pressures to the user. But there are drawbacks to this type of indirect heating. Costly, often complex equipment, for one. The need for licensed boiler operators for another. Then, too, high operating pressures pose some very real safety problems.

That's Why There's Therminol® Heat Transfer Fluids


With Therminol fluids, you discover the best of all indirect heating worlds—high and low heat ranges, thermal stability, and efficient heat transfer *without* high pressure, *without* the need for costly equipment, and *without* the need for continuous observation. Therminol fluid heat systems offer you the most dependable, most efficient indirect heating and cooling your process dollars can buy—and this booklet tells you why.

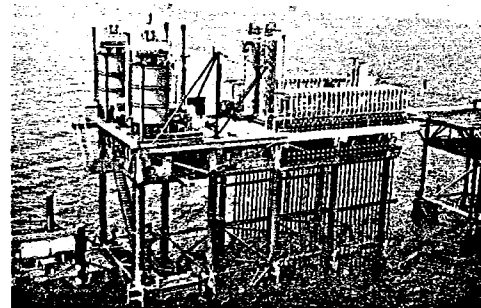

Petroleum processors, both on-shore and off-shore, enjoy increased heat transfer safety with Therminol.

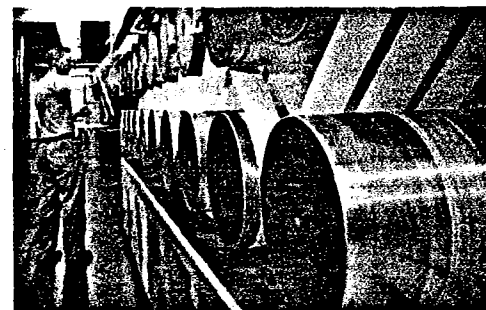

Therminol brings uniform temperature control to textile processing and finishing.

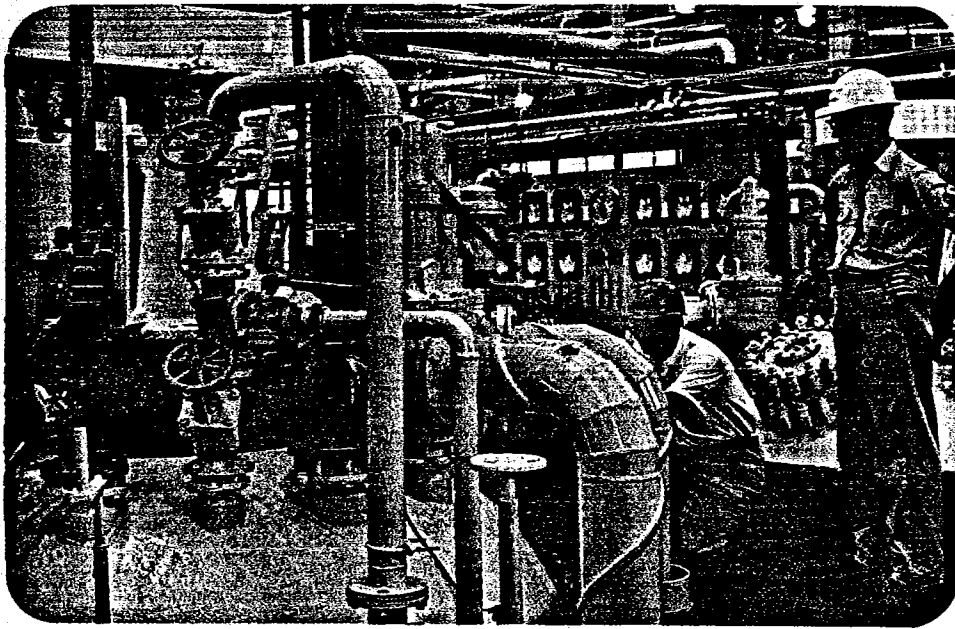


The big plus you get with Therminol in chemical processing, like this resin kettle, is heating and cooling from the same system.

What makes Therminol right for your application? Hundreds of customers who have specified Therminol for new installations and conversions of existing systems will give you these answers.

LOWER CAPITAL COSTS | Without pressure you can save 25% to 50%. That's because you don't need heavy piping, relief valves or other high pressure devices.

LOWER OPERATING COSTS | Fluid make-up is generally not required. Heat losses are reduced over vapor phase systems because condensate sub-cooling is not present. Routine maintenance is minimized and these non-pressured systems require only minimum attention by non-licensed personnel.

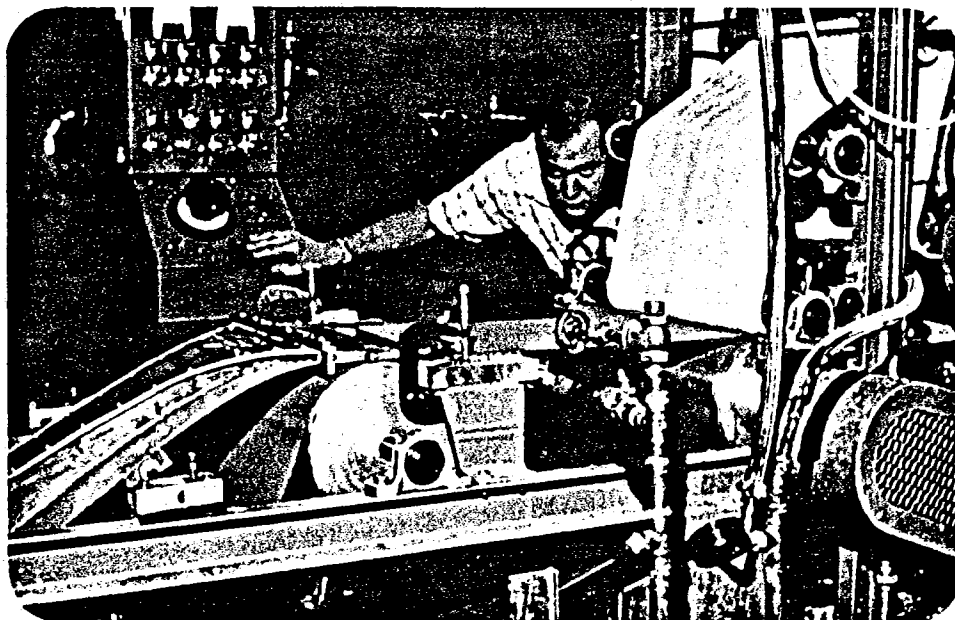

Since Therminol remains liquid throughout its temperature range, rapid circulation through your rolls helps achieve uniform heat. This has resulted in greater throughput and fewer rejects for Therminol customers producing rubber, plastics and paper.

DSW 434793

STLCOPCB4087852




Textile processing and finishing—where close temperature control is a must—is a "natural" for Therminol, with no need for venting, high operating pressures, and continuous observation.

You'll be surprised at how easy it is to work with a Therminol heat transfer system. The middle diagram at the right shows typical Therminol liquid heating and cooling systems used together to maintain very close temperature control at the user. Note that the term "heater" is used rather than "boiler" since we do not boil Therminol in the primary heat source.

Benefits of a Liquid Heating System


You gain a wide spectrum of benefits with a Therminol liquid heating system.

- In many locations, codes favor Therminol systems, thus minimizing the need for expensive operating personnel.
- Positive circulation through your users ends venting problems; the system remains sealed and flooded.
- Liquid systems respond more rapidly to your system's load changes.
- Install your users at any level in relation to the heater; there's no condensate removal problem.
- You realize a substantial cost savings with smaller pipe. Also, smaller valves control temperature more accurately—down to $\pm 2^\circ\text{F}$.
- No temperature loss due to pressure drop in the piping; with vapor, any line friction loss results in a lower vapor condensing temperature at the users.
- You can meet different temperature demands in the same user if required by certain processes by adjusting the circulation rate.
- A liquid heating medium, like Therminol, will usually give you higher heat transfer rates in certain types of users, such as shell and tube heat exchangers.
- Cooling can be handled in the same system. Heating systems for Therminol are sold around the world on a competitive basis. Contact your nearest Monsanto office, (listed on the inside back cover) for information and recommendations on the heating equipment that will fit your particular need.

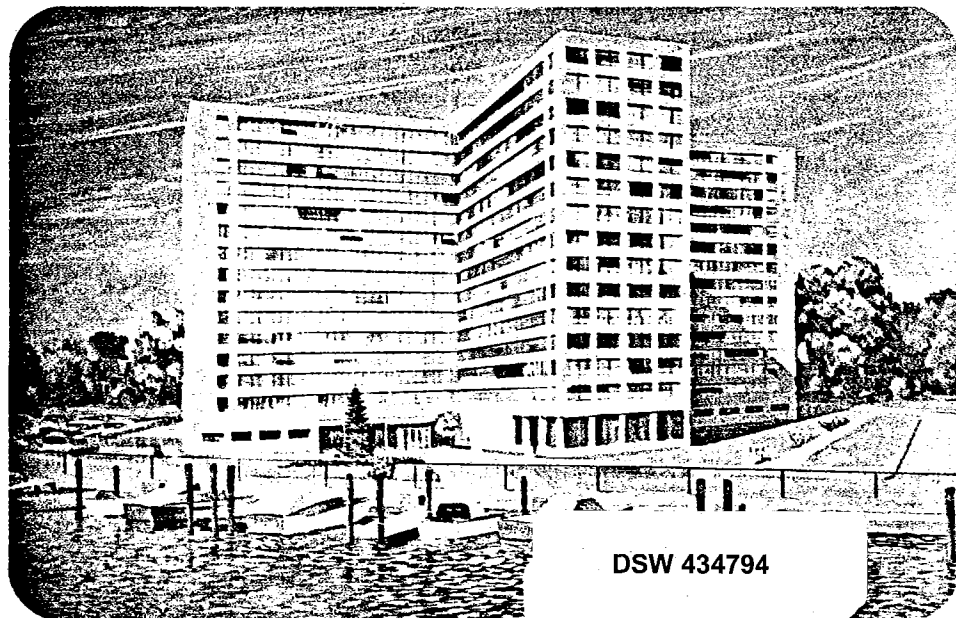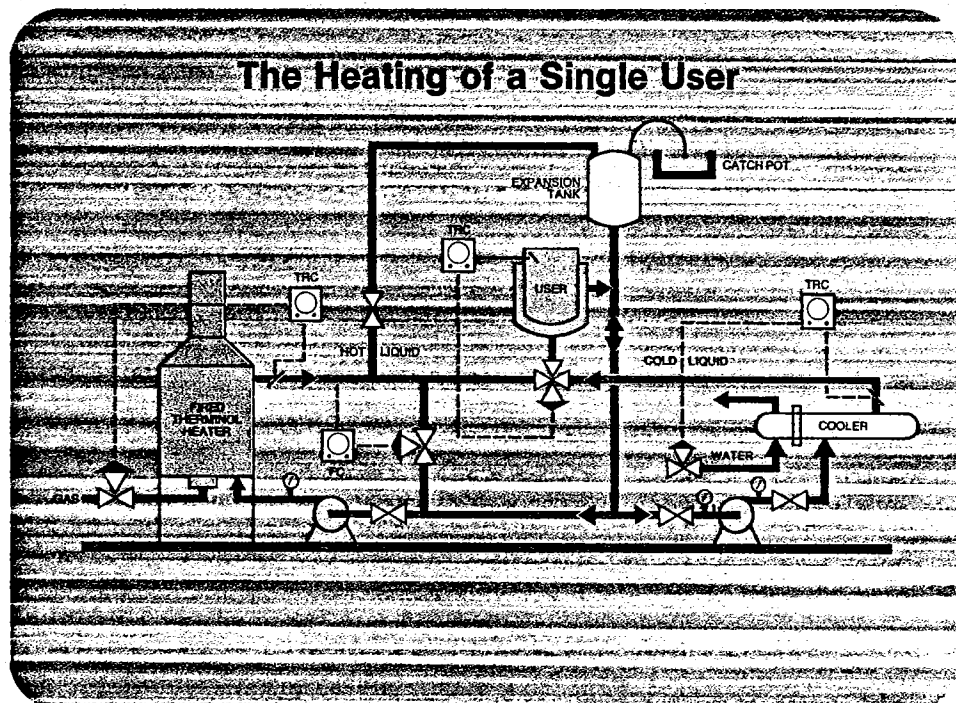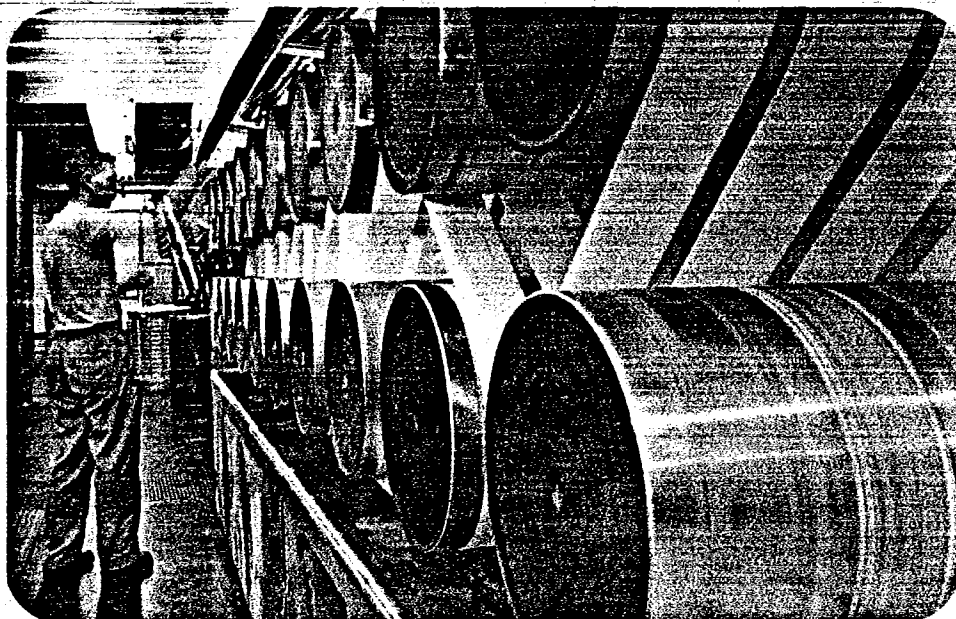

The conversion of the Detroit River House Cooperative from steam boilers to Therminol heating saves \$36,000 annually by providing non-pressurized unattended operation and through documented fuel savings.

DSW 434794

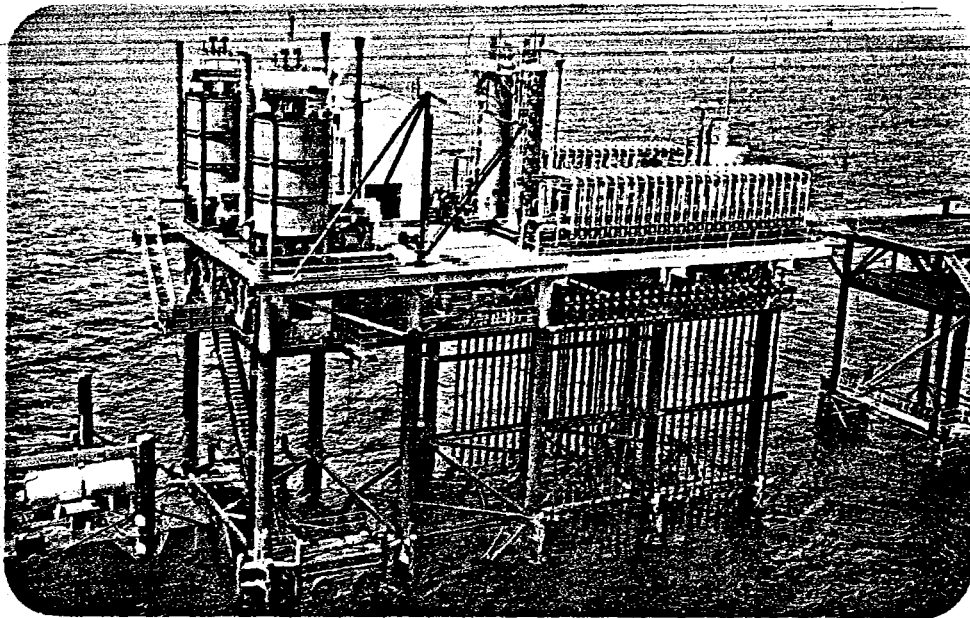

On this offshore processing platform, a Therminol system provides efficient, dependable heat to multiple users — controllable over a wide temperature range.


The Therminol Family

You find more design and engineering flexibility with Therminol than with any other heat transfer media because of the wide range of fluids in the Therminol family.

The Therminol series of heat transfer fluids offer an operating range of 0° to 800°F.

Important for the future, as your processes change, you can pick a new Therminol fluid to match your new needs. Most Therminol fluids are interchangeable in your liquid heating system.

The charts on the next two pages detail the broad characteristics of the Therminol family of fluids.

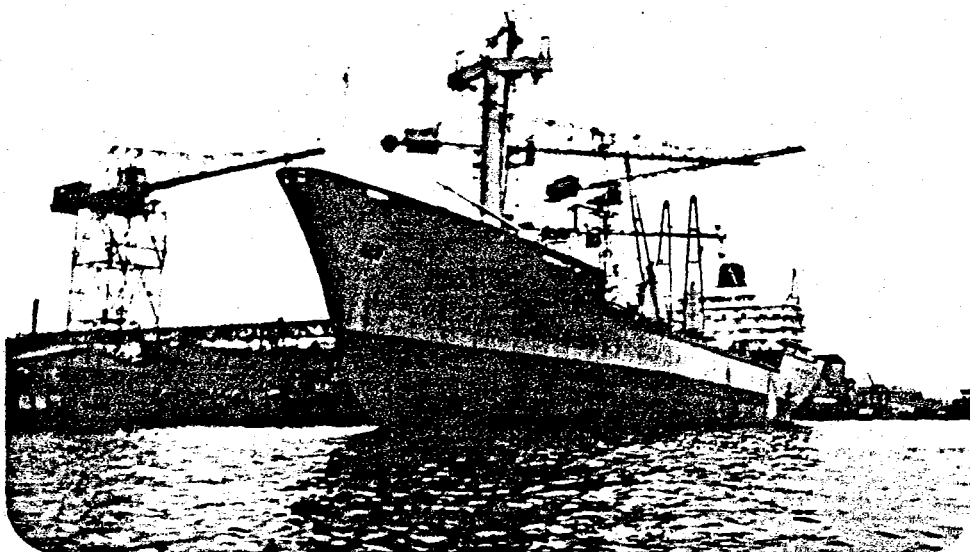


On both ships and barges Therminol preempts the high costs of pressurized indirect heating. Therminol's ability to recover waste heat adds to the savings.

Low temperature pumpability allows convenient cold weather start up, so viscous liquid cargoes are ready for unloading where the vessel reaches port.

DSW 434795

Temperature Use Ranges For Therminol® Heat Transfer Fluids

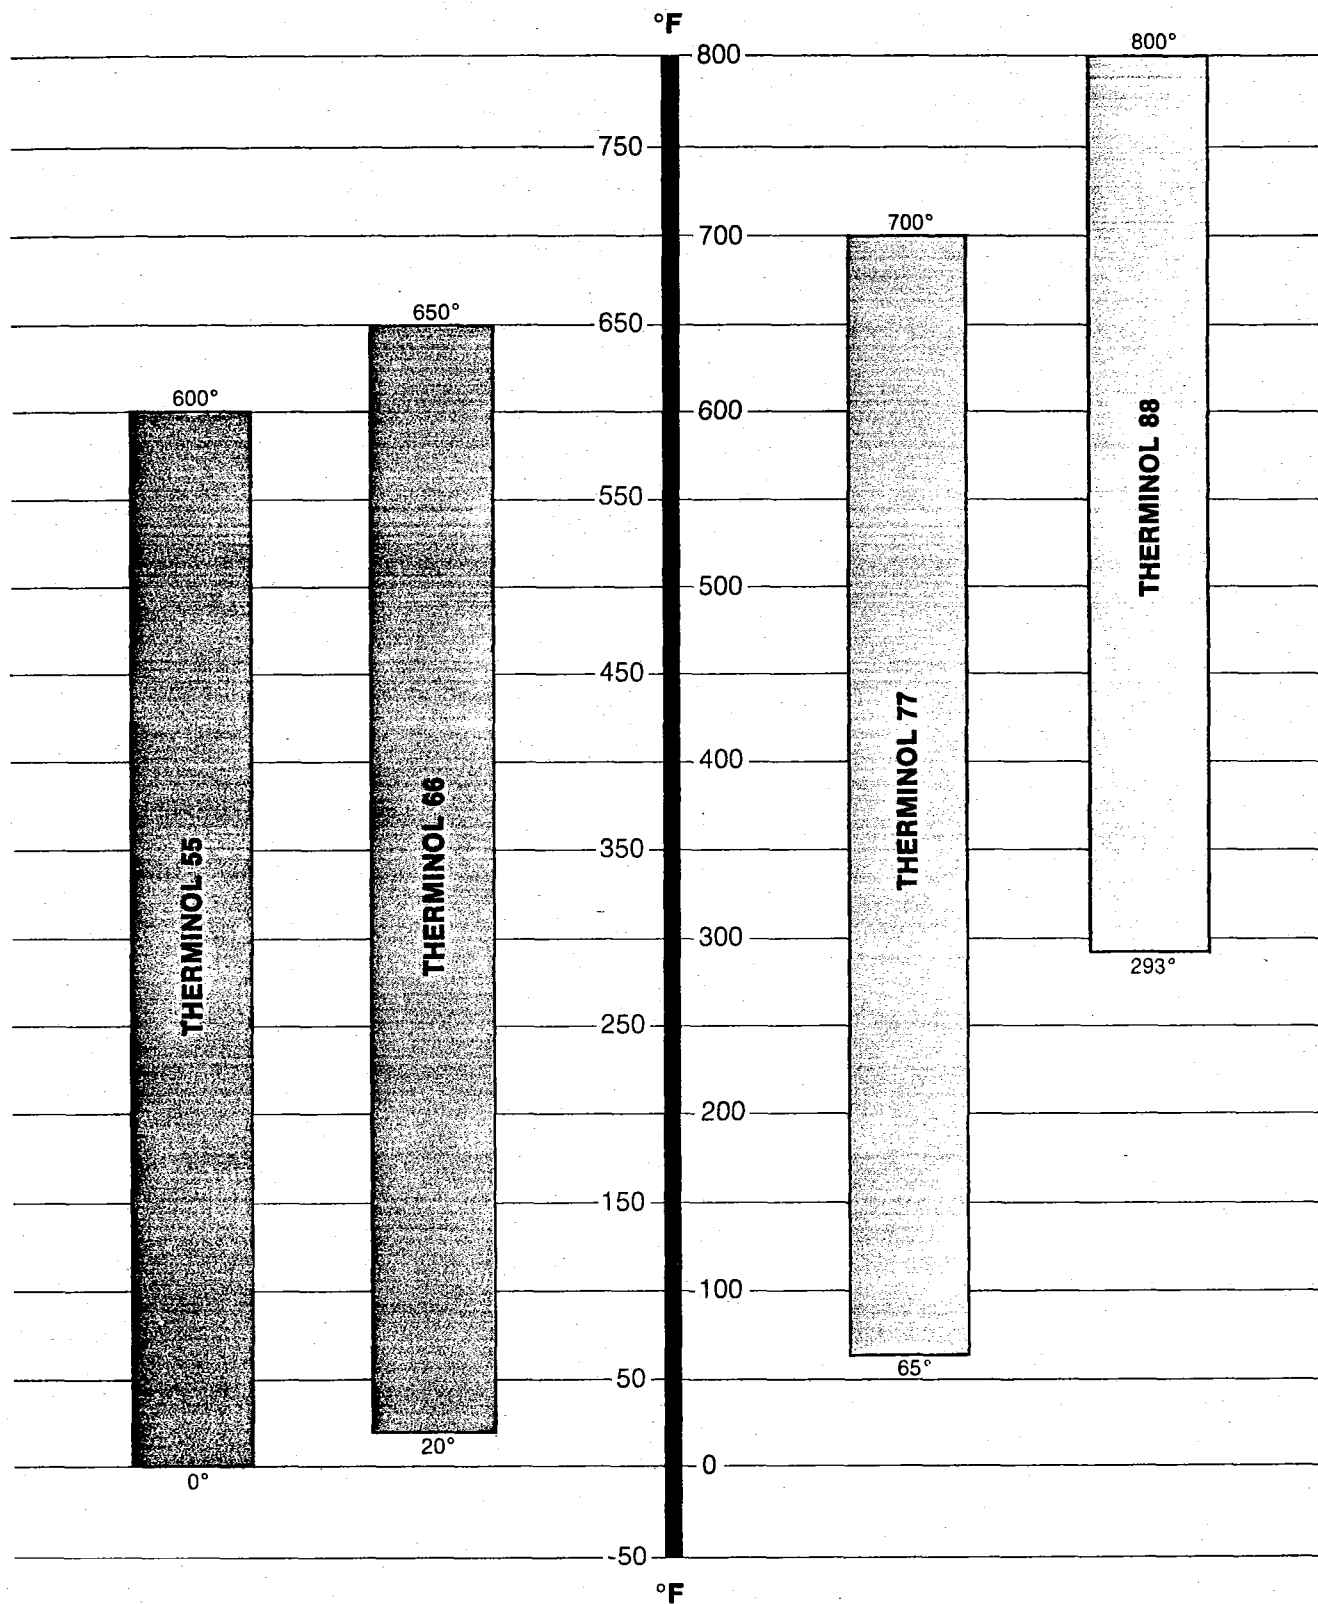

Therminol heat transfer fluids offer a wide range of operating temperature capability. As this bar chart indicates, there is a Therminol fluid for virtually any special temperature situation your process may encounter — from 0° to 800°F. Each Therminol fluid is carefully formulated to bring the best heat transfer properties to a given temperature situation. This page and the following will help you select the right Therminol fluid for your application.

DSW 434796

STLCOPCB4087855

THERMINOL 66

Temperature °F	Temperature °C	Vapor Pressure mm Hg Absolute	Specific Heat BTU/Lb. °F	Thermal Conductivity BTU/Hr. ft² °F/ft.	Density Lb./Gal.	Viscosity Cs
0	-18	—	0.320	0.0689	7.82	1610
100	38	—	0.345	0.0703	7.81	30
200	93	—	0.372	0.0733	7.60	5
300	149	1.0	0.372	0.0723	6.69	2.1
400	204	2.0	0.370	0.0692	6.39	1.16
500	260	10.0	0.370	0.0681	6.07	0.90
600	316	26.0	0.376	0.0630	5.76	0.60

THERMINOL 66

Temperature °F	Temperature °C	Vapor Pressure mm Hg Absolute	Specific Heat BTU/Lb. °F	Thermal Conductivity BTU/Hr. ft² °F/ft.	Density Lb./Gal.	Viscosity Cs
0	—	—	0.320	0.0720	8.67	50000
50	10	—	0.350	0.0711	8.51	250
100	38	—	0.380	0.0703	8.34	28.0
150	66	—	0.405	0.0695	8.14	10.0
200	93	0.1	0.430	0.0687	7.91	4.40
250	121	—	0.455	0.0678	7.77	2.60
300	149	2.0	0.480	0.0670	7.59	1.70
350	177	—	0.505	0.0662	7.39	1.20
400	204	20.0	0.530	0.0653	7.17	0.90
450	232	50.0	0.555	0.0645	7.04	0.69
500	260	100.0	0.580	0.0637	6.75	0.55
550	288	200.0	0.605	0.0628	6.62	0.46
600	316	350.0	0.630	0.0620	6.42	0.40
650	343	760.0	0.655	0.0613	6.24	0.36
700	371	1000	0.680	0.0605	6.09	0.31

THERMINOL 77

Temperature °F	Temperature °C	Vapor Pressure mm Hg Absolute	Specific Heat BTU/Lb. °F	Thermal Conductivity BTU/Hr. ft² °F/ft.	Density Lb./Gal.	Viscosity Cs
50	10	—	0.330	0.0793	9.8	—
100	38	—	0.350	0.0781	9.6	181
200	93	—	0.375	0.0760	9.26	7.78
300	149	0.27	0.420	0.0739	8.94	2.65
400	204	1.03	0.455	0.0719	8.58	1.50
500	260	9.2	0.495	0.0698	8.16	0.96
600	316	44	0.530	0.0678	7.76	0.66
700	371	168	0.565	0.0660	7.38	0.46
800	426	530	0.600	0.0640	7.05	0.34

THERMINOL 88

Temperature °F	Temperature °C	Vapor Pressure mm Hg.	Specific Heat BTU/# °F	Thermal Conductivity BTU/hr-ft² °F/ft.	Density Lb./Gal.	Viscosity cs
300	149	1.2	0.467	0.0738	8.41	1.57
400	204	11	0.497	0.0712	8.00	0.87
500	260	65	0.525	0.0686	7.66	0.55
600	316	260	0.554	0.0660	7.33	0.38
700	371	800	0.584	0.0634	6.91	0.29
800	426	1500	0.613	0.0608	6.58	0.23
900	482	3000	0.642	0.0581	6.16	0.19

DSW 434797

STLCOPCB4087856

therminol®

Applications Unlimited

The pictures on the preceding pages have given you a glimpse of a few typical Therminol applications. On land and sea. In plants and apartment buildings.

But the applications for Therminol are actually **unlimited**. As unlimited as your needs for safe, uniform, efficient heat delivery.

Here are a few more areas where Therminol has met those needs:

CHEMICAL PROCESSING . . . especially where flammable materials are handled. Therminol has proved particularly successful for exchangers, distillation columns, reboilers, mixers, dryers, etc.

RESIN PROCESSING . . . where a single "circuit" with multiple users and varying temperatures is desirable.


PLASTICS, RUBBER MOLDING AND PAPER . . . where uniform heating, rapid temperature flux and pin-point control is essential such as heating corrugating and drying rolls, crimping presses, calendars, platens and molds.

TEXTILES PROCESSING . . . for controlled temperatures in processing and finishing of synthetic fibers.

PETROLEUM AND OFF-SHORE DRILLING . . . offers control over a wide temperature range and the ability to accommodate sudden fluctuations in processing loads automated with complete safety.

SHIPS AND BARGES . . . preempts the cost of pressurized indirect heating systems with efficient, dependable heating while underway.

SPACE HEATING . . . ideal for hospitals, hotels, apartment houses and office buildings where the goal is safety, low maintenance and reduced operating costs.

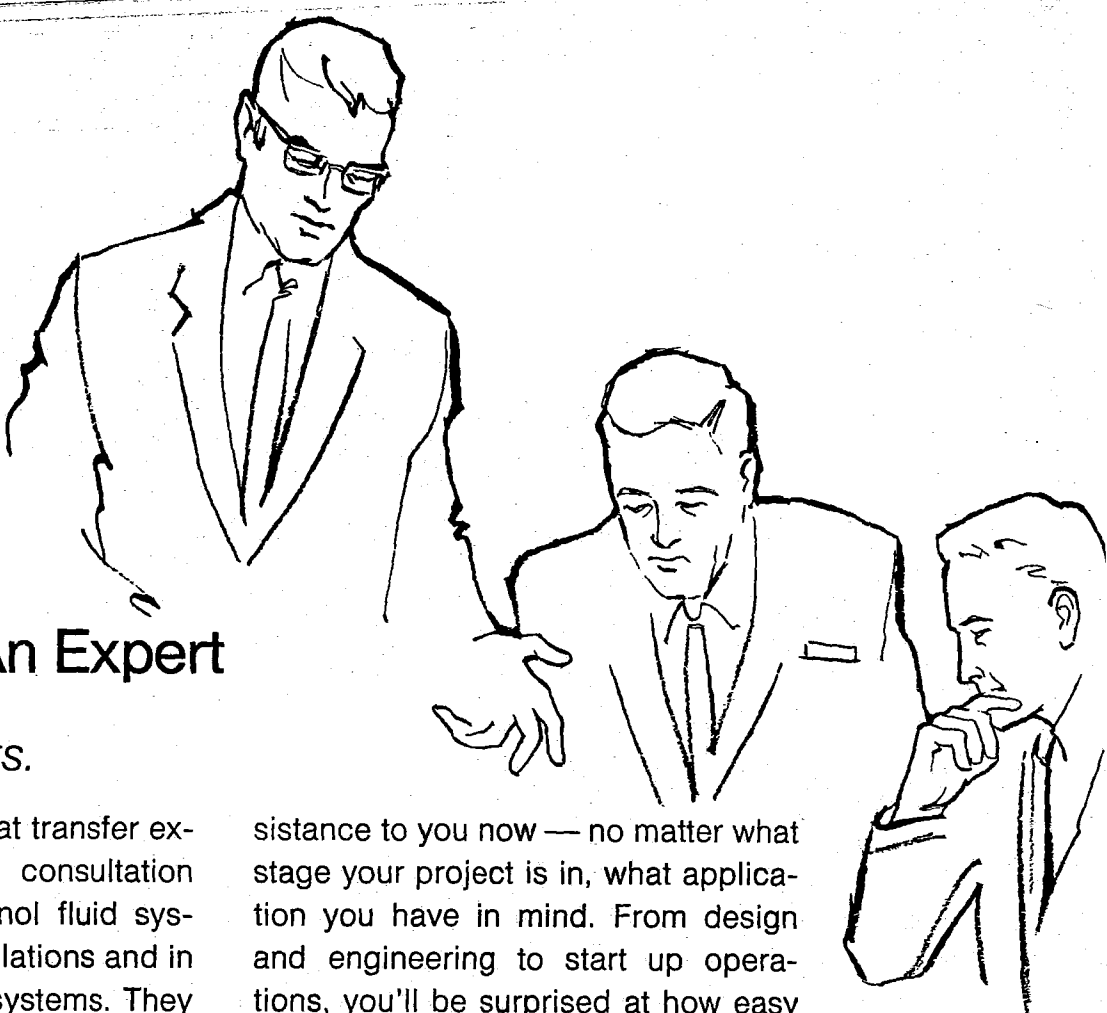


You Don't Have To Be An Expert

We'll loan you ours.

Talk to the Monsanto heat transfer experts. They've provided consultation for hundreds of Therminol fluid systems—in both new installations and in conversions of existing systems. They can point out the benefits of a Therminol system, and offer detailed as-

sistance to you now — no matter what stage your project is in, what application you have in mind. From design and engineering to start up operations, you'll be surprised at how easy it is to work with a Therminol heat transfer system.

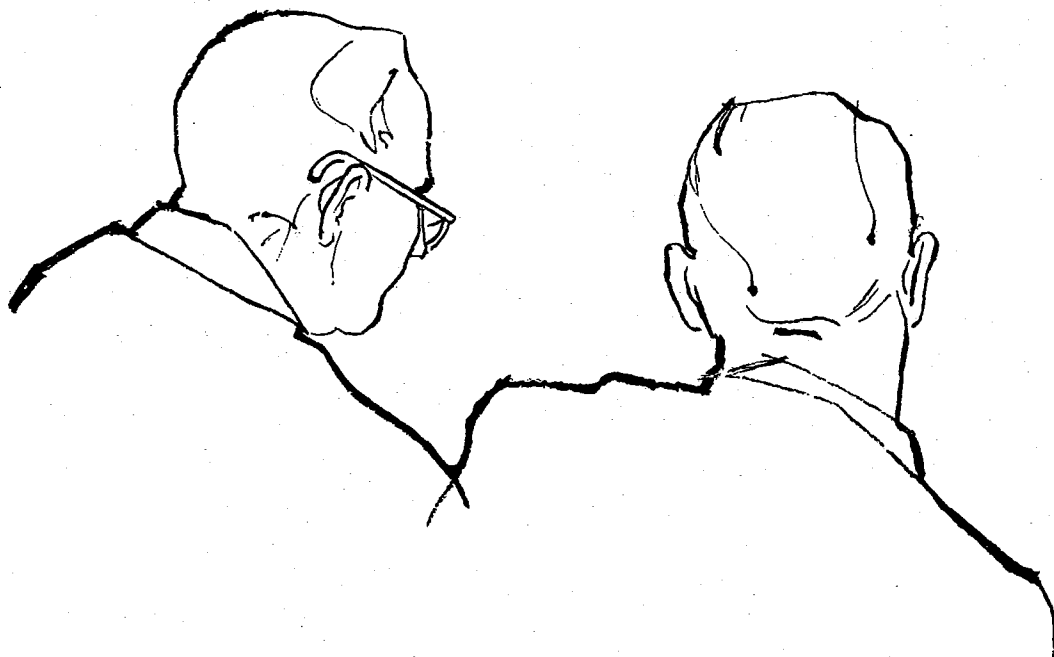

DSW 434799

STLCOPCB4087858

DISTRICT SALES OFFICES ALL DIVISIONS

AKRON, OHIO 44313

260 Springside Drive
Montrose Development Park
Tel. (216) 666-4111

ATLANTA, GEORGIA 30339

320 Interstate North Parkway
Suite 500
Tel. (404) 432-7111

BOSTON, MASSACHUSETTS 02149

Everett Station
Tel. (617) 387-5010

CHICAGO, ILLINOIS

3158 Des Plaines Ave.
Des Plaines, Illinois 60018
Tel. (312) 296-6688

CINCINNATI, OHIO 45206

1501 Madison Road
Tel. (513) 751-6707

DETROIT, MICHIGAN

500 Northland Towers West
Southfield, Mich. 48075
Tel. (313) 357-0910

HONOLULU, HAWAII 96812

205 Pacific International Bldg.
677 Ala Moana Blvd., P. O. Box 3824
Tel. (808) 531-2744

HOUSTON, TEXAS 77027

1301 Post Oak Tower
5051 Westheimer Road
Tel. (713) 621-9550

LOS ANGELES, CALIFORNIA 90022

6670 E. Flotilla St.
Tel. (213) 723-2492

NEW YORK, NEW YORK 10017

277 Park Avenue
Tel. (212) 922-4111

ST. LOUIS, MISSOURI 63166

800 N. Lindbergh Blvd.
Tel. (314) 694-1000

SAN FRANCISCO BAY AREA

2710 Lafayette, Santa Clara, Calif. 95052
Tel. (408) 243-0414

SEATTLE, WASHINGTON 98121

2112 Third Avenue
Tel. (206) 622-4203

WILMINGTON, DELAWARE 19810

Suite 204, Bancroft Bldg.
3411 Silverside Road
Tel. (302) 478-4600

MONSANTO, 800 N. LINDBERGH BLVD., ST. LOUIS, MISSOURI 63166

**Additional District Offices
are maintained by:**

Agricultural Division

DECATUR, ILLINOIS 62523
207 Decatur Professional Building
363 South Main Street
Tel. (217) 423-6031

DES MOINES, IOWA 50310
312 Merle Hay Tower
Tel. (515) 276-8503

INDIANAPOLIS INDIANA 46205
Suite 215, 4002 Meadows Drive Building
Tel. (317) 547-9148

KANSAS CITY, MISSOURI 64133
701 Blue Ridge Tower
4240 Blue Ridge Boulevard
Tel. (816) 353-8060

LULING, LOUISIANA 70070
P. O. Box 174
Tel. (504) 784-6263

MANKATO, MINNESOTA 56001
111 Madison East
Tel. (607) 387-3406

MEMPHIS, TENNESSEE 38104
303 Union Plaza Building
1835 Union Avenue
Tel. (901) 278-7811

MUSCATINE, IOWA 52761
P. O. Box 473
Tel. (319) 263-1331

Hydrocarbons & Polymers Division

NEW ENGLAND AREA
730 Worcester St.
Indian Orchard, Mass. 01051
Tel. (413) 788-6911

Lion Oil

EL DORADO, ARKANSAS 71730
Lion Oil Building
Tel. (501) 863-3111

JACKSON, MISSISSIPPI 39209
P. O. Box 10937, Westland Station
Tel. (601) 352-3648

N. LITTLE ROCK, ARKANSAS 72118
410 West 8th Street, P. O. Box 5821
Tel. (501) 376-2437

MEMPHIS, TENNESSEE 38113
1023 Riverside Drive, P. O. Box 13248
Tel. (901) 948-4451

Plastic Products & Resins Division

EUGENE, OREGON 97402
855 Seneca Road
Tel. (503) 342-7201

KENILWORTH, NEW JERSEY 07033
North Seventh St. & Monroe Ave.
Tel. (201) 276-2900

NEW ENGLAND AREA
190 Grochmal Avenue
Indian Orchard, Mass. 01051
Tel. (413) 788-6911

Textiles Division

CHARLOTTE, NORTH CAROLINA 28210
6230 Fairview Road, Suite 400
Tel. (704) 364-0110

GREENVILLE, SOUTH CAROLINA 29608
McAlister Plaza
P. O. Box 5564, Station B
Tel. (803) 242-6700

NEW YORK, NEW YORK 10001
350 Fifth Ave.
Tel. (212) 556-5100

Monsanto

DSW 434801

Monsanto Industrial Chemical Company / Specialty Products / 800 North Lindbergh Blvd. / St. Louis, Missouri 63166

1171—IGI—LRA LITHO IN USA

STLCOPCB4087860